



TERMINALS OF ECU

2JZ-GE Engine:

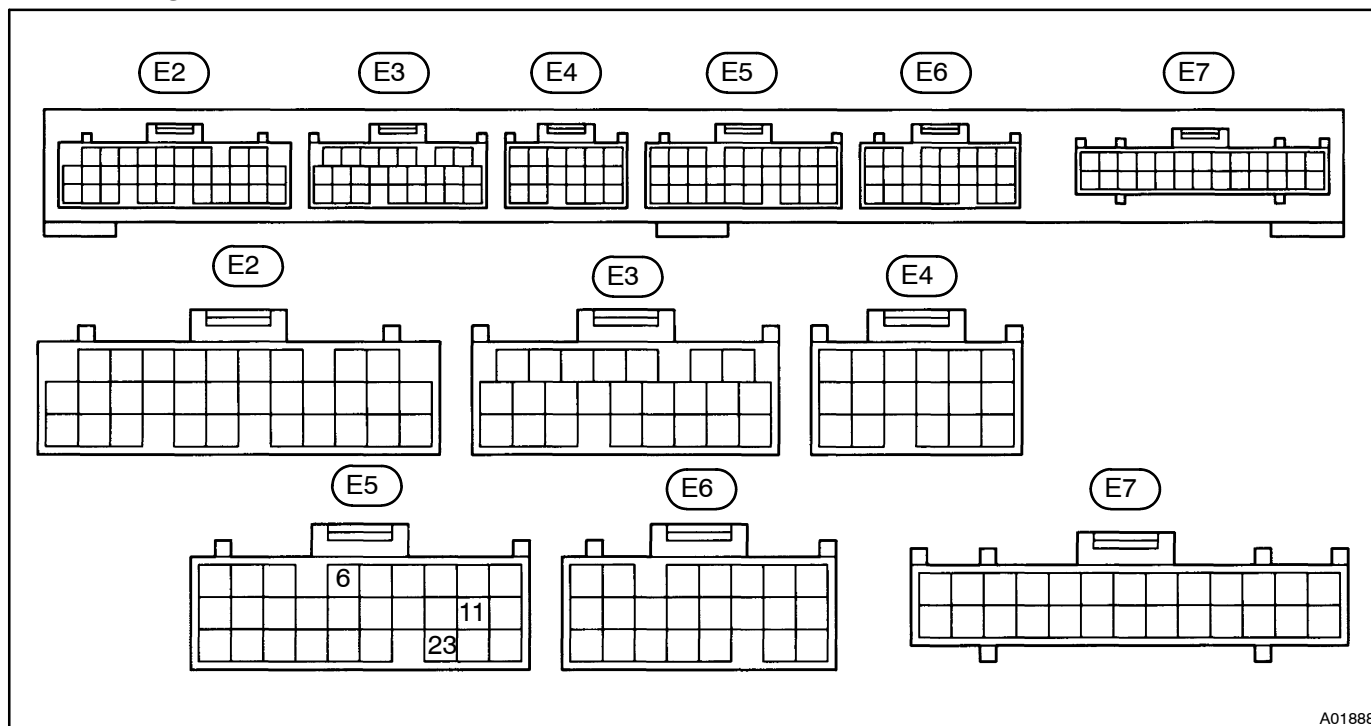

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
STP ↔ E1 (E5 - 6 ↔ E3 - 17)	G-W ↔ BR	Ignition switch ON and Depress brake pedal	10 - 16 V
		Ignition switch OFF or Release brake pedal	Below 1 V
ST1- ↔ E1 (E5 - 11 ↔ E3 - 17)	B-L ↔ BR	Ignition switch ON and release brake pedal	10 - 16 V
		Ignition switch OFF or depress brake pedal	Below 1 V
CCS ↔ E1 (E5 - 23 ↔ E3 - 17)	R-L ↔ BR	Ignition switch ON	10 - 16 V
		Ignition switch ON CANCEL switch held ON	6.9 - 9.8 V
		Ignition switch ON SET/COAST switch held ON	4.7 - 6.9 V
		Ignition switch ON RES/ACC switch held ON	2.4 - 3.8 V

3UZ-FE Engine:

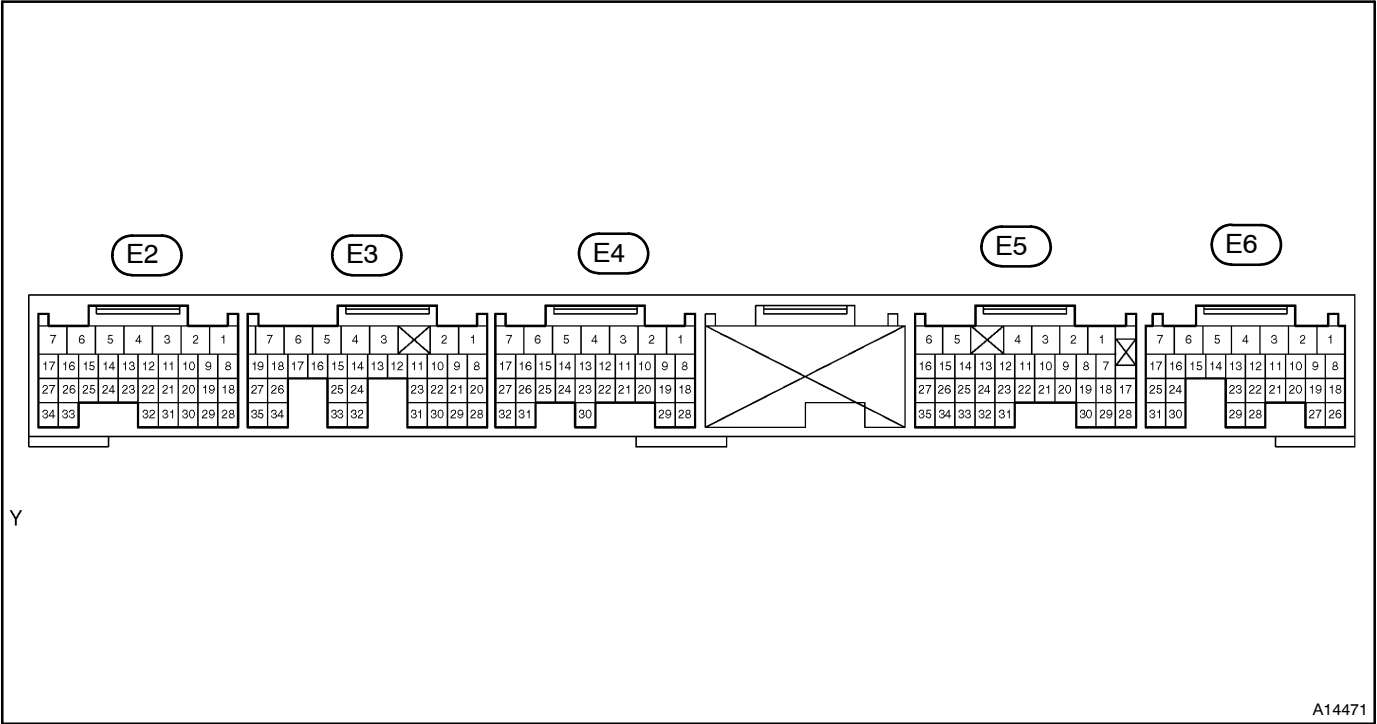

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
STP ↔ E1 (E5 - 4 ↔ E5 - 7)	G-W ↔ BR	Ignition switch ON and Depress brake pedal	10 - 16 V
		Ignition switch OFF or Release brake pedal	Below 1 V
ST1- ↔ E1 (E5 - 8 ↔ E5 - 7)	B-L ↔ BR	Ignition switch ON and release brake pedal	10 - 16 V
		Ignition switch OFF or depress brake pedal	Below 1 V
CCS ↔ E1 (E5 - 31 ↔ E5 - 7)	R-Y ↔ BR	Ignition switch ON	10 - 16 V
		Ignition switch ON CANCEL switch held ON	6.9 - 9.8 V
		Ignition switch ON SET/COAST switch held ON	4.7 - 6.9 V
		Ignition switch ON RES/ACC switch held ON	2.4 - 3.8 V