


## Door lock motor circuit

### WIRING DIAGRAM

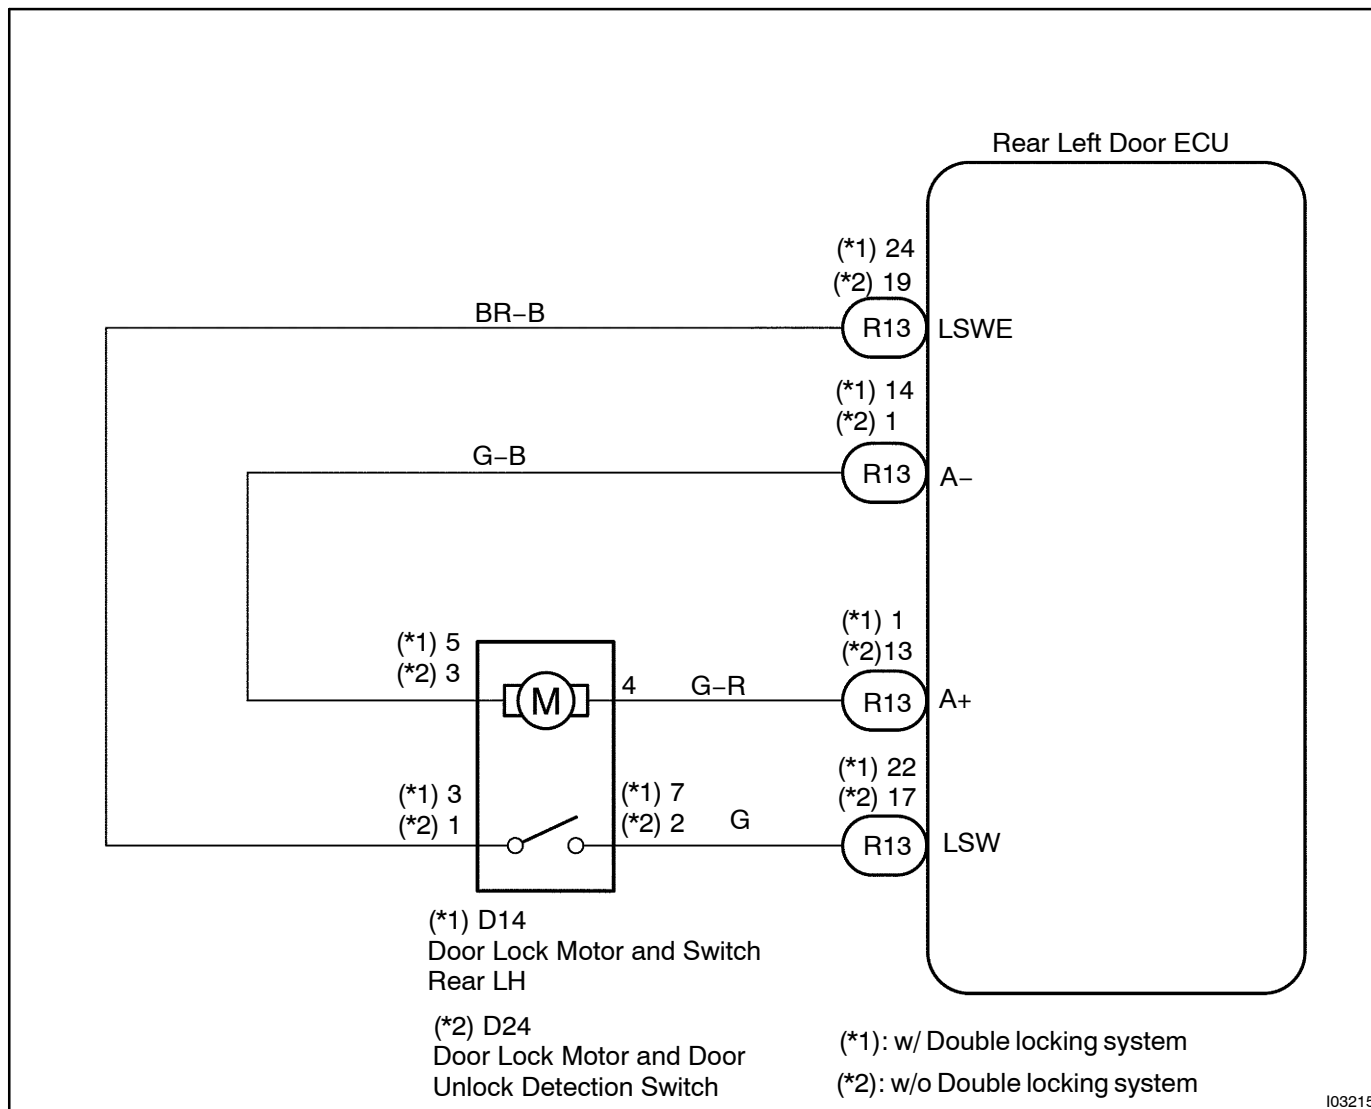

INSPECTION PROCEDURE

1	Check door lock motor (w/o double locking system: See Pub. No. RM588E on page BE-148 w/ double locking system: <a href="#">See page BE-12</a> .)
---	--

NG

Replace the door lock motor.

OK

2	Check wireharness and connector between door lock motor and rear left door ECU.
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptom table (See Pub. No. RM588E on page DI-616).