


# ELECTRICAL WIRING ROUTING

## Position of Parts in Body

[RHD]

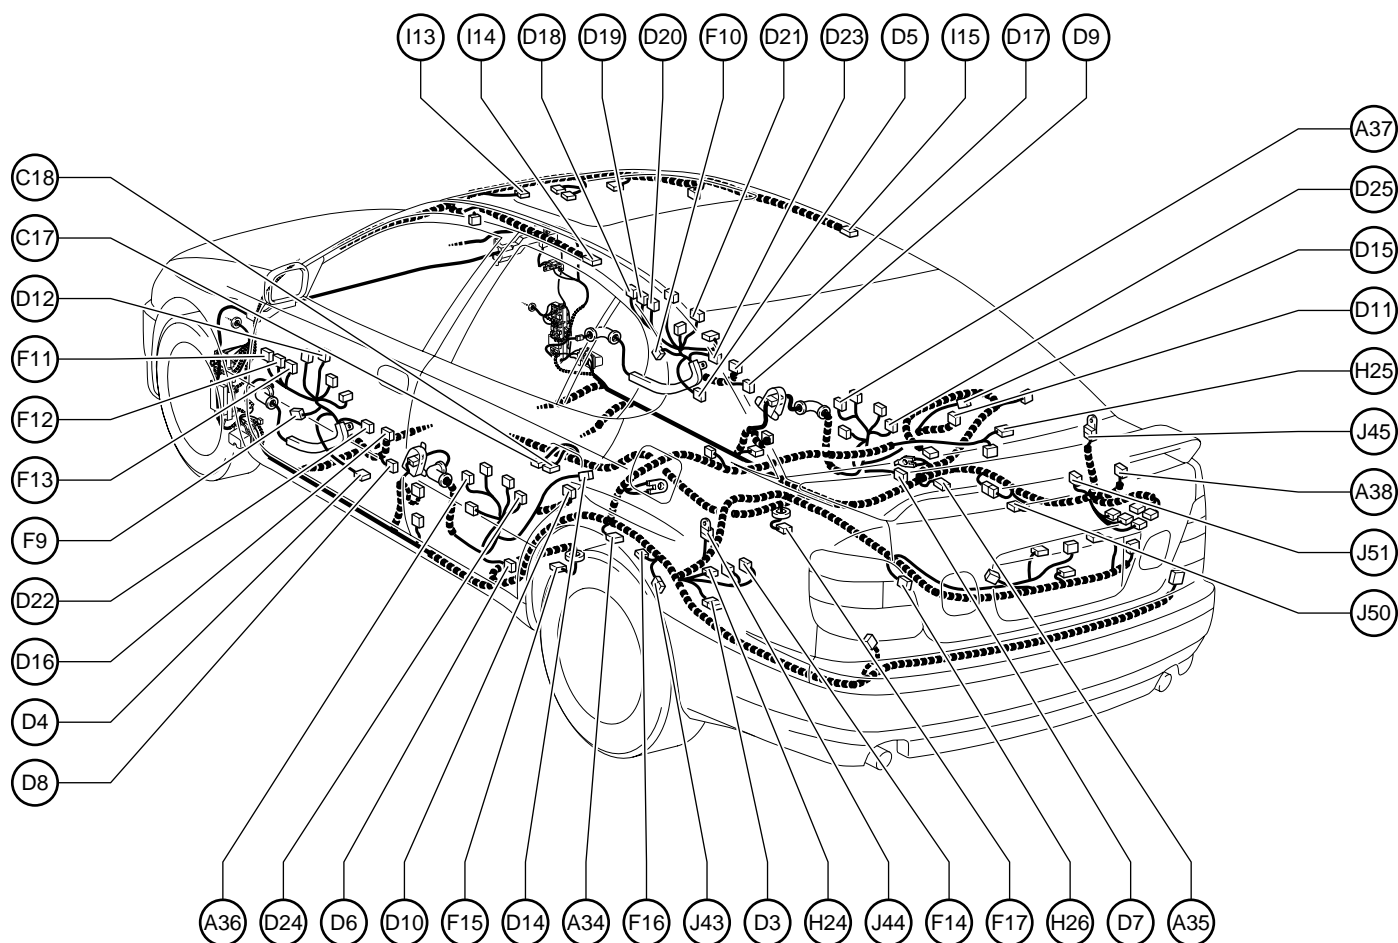

A34 ABS Speed Sensor Rear LH  
 A35 ABS Speed Sensor Rear RH  
 A36 Ashtray Illumination Rear LH  
 A37 Ashtray Illumination Rear RH  
 A38 Auto Antenna Control Relay and Motor

C17 Cellular Phone (Hand Set)  
 C18 Cellular Phone (Hand Set)

D 3 Diode (Luggage Door Open Detection)  
 D 4 Door Courtesy Light Front LH  
 D 5 Door Courtesy Light Front RH  
 D 6 Door Courtesy Light Rear LH  
 D 7 Door Courtesy Light Rear RH  
 D 8 Door Courtesy SW Front LH  
 D 9 Door Courtesy SW Front RH  
 D10 Door Courtesy SW Rear LH  
 D11 Door Courtesy SW Rear RH  
 D12 Door Lock Control SW LH  
 D14 Door Lock Motor and Door Lock Detection SW Rear LH  
 D15 Door Lock Motor and Door Lock Detection SW Rear RH  
 D16 Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front LH  
 D17 Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front RH  
 D18 Driver Door ECU  
 D19 Driver Door ECU  
 D20 Driver Door ECU  
 D21 Driving Position Memory SW

D22 Door Lock Motor and SW Front LH  
 D23 Door Lock Motor and SW Front RH  
 D24 Door Lock Motor and SW Rear LH  
 D25 Door Lock Motor and SW Rear RH

F 9 Front Door Speaker LH  
 F10 Front Door Speaker RH  
 F11 Front Passenger Door ECU  
 F12 Front Passenger Door ECU  
 F13 Front Passenger Door ECU  
 F14 Fuel Lid Opener Motor  
 F15 Fuel Pump and Sender  
 F16 Fuel Pump Control ECU  
 F17 Fuel Sender (Sub)

H24 Height Control Sensor (Rear)  
 H25 High Mounted Stop Light (Bulb Type)  
 H26 High Mounted Stop Light (LED Type)

I 13 Inner Mirror  
 I 14 Interior Light Rear LH  
 I 15 Interior Light Rear RH

J 43 Junction Connector  
 J 44 Junction Connector  
 J 45 Junction Connector  
 J 50 Junction Connector  
 J 51 Junction Connector