

HEADLIGHT (w/o DAYTIME RUNNING LIGHT)

SERVICE HINTS

HEAD LP RELAY

1-2 : Closed with light control SW at **HEAD** position or dimmer SW at **FLASH** position

C13 (A), (B) COMBINATION SW

(A) 14-(A) 16, (B) 14-(B) 9 : Closed with light control SW at **HEAD** position

(A) 8-(A) 17, (B) 2-(B) 9 : Closed with dimmer SW at **HIGH** or **FLASH** position

(A) 9-(A) 17, (B) 1-(B) 9 : Closed with dimmer SW at **FLASH** position

: PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
B6	A	72 (LHD)	H9		82 (RHD)	J15		74 (LHD)
		86 (RHD)	H10		68 (LHD)	J16		74 (LHD)
C11	A	72 (LHD)			82 (RHD)	J18		74 (LHD)
		86 (RHD)	H11		68 (LHD)	J29		84 (RHD)
C12	B	72 (LHD)			82 (RHD)	J32		88 (RHD)
		86 (RHD)	H12		68 (LHD)	J33	B	88 (RHD)
C13	A	72 (LHD)			82 (RHD)	J37		88 (RHD)
		86 (RHD)	H13		68 (LHD)	J39		88 (RHD)
	B	86 (RHD)			82 (RHD)	J40		88 (RHD)
H8		68 (LHD)	J8		74 (LHD)	J42		88 (RHD)
		82 (RHD)	J10		74 (LHD)			
H9		68 (LHD)	J11	A	74 (LHD)			

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	54 (LHD)	Engine Room No.1 R/B (Engine Compartment Right)
	54 (RHD)	Engine Room No.1 R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	58 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	58 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)
1G	59 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	59 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	98 (LHD)	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
	108 (RHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IA2	108 (RHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IE1	98 (LHD)	Instrument Panel Wire and Cowl Wire (Left Side of the Steering Column)
IE2		
II2	100 (LHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
II4		
IJ1	110 (RHD)	Instrument Panel Wire and Cowl Wire (Right Side of the Steering Column)
IJ2		
IK1	110 (RHD)	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)

**: GROUND POINTS**


Code	See Page	Ground Points Location
EB	96 (LHD)	Left Fender
	106 (RHD)	
EE	96 (LHD)	Under the ABS & TRC & VSC Actuator
	106 (RHD)	
IF	98 (LHD)	Left Kick Panel
	108 (RHD)	
II	98 (LHD)	Right Side of the Cowl Panel
	108 (RHD)	Cowl Side Panel RH

**: SPLICE POINTS**


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I1	100 (LHD)	Cowl Wire	I8	110 (RHD)	Cowl Wire

HEADLIGHT (w/o DAYTIME RUNNING LIGHT)


(LHD) B6 (A)

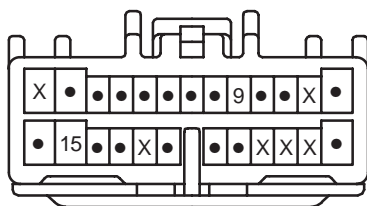


(RHD) B6 (A)

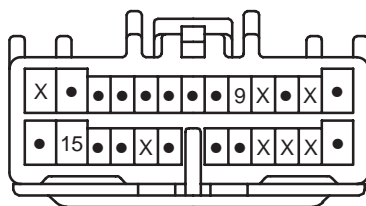


C11 (A)

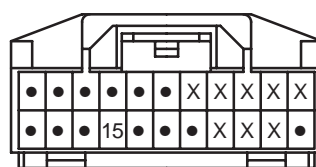


C12 (B)

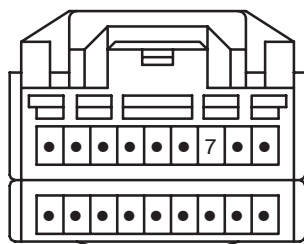

(Except Australia) C13 (A)

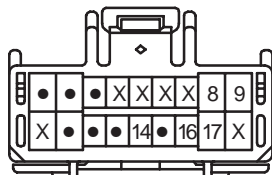

(Australia) C13 (B)

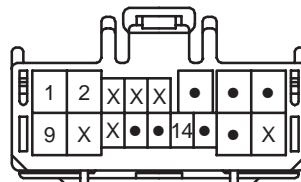

H8



H9



H10 BLACK



H11 BROWN




H12 BLACK



H13 BROWN




J8

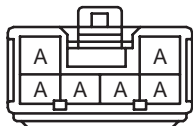

(Hint : See Page 7, 23, 39)

J10 ORANGE

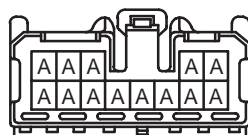


(Hint : See Page 7, 23, 39)

J11 (A) BLACK




(Hint : See Page 7, 23, 39)

J15

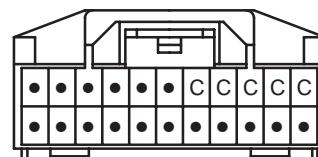

(Hint : See Page 7, 23, 39)

J16

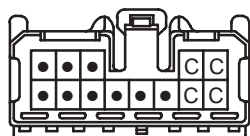

(Hint : See Page 7, 23, 39)

J18




(Hint : See Page 7, 23, 39)

J29 BLUE



(Hint : See Page 7, 23, 39)

J32

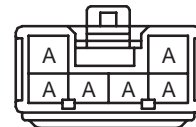


(Hint : See Page 7, 23, 39)

J33 (B) BLACK




(Hint : See Page 7, 23, 39)

J37



(Hint : See Page 7, 23, 39)

J39

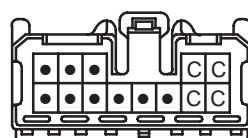


(Hint : See Page 7, 23, 39)

J40 GRAY



(Hint : See Page 7, 23, 39)

J42

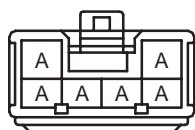

(Hint : See Page 7, 23, 39)