


## Luggage courtesy switch circuit

### CIRCUIT DESCRIPTION

The luggage courtesy switch goes on when luggage compartment door is opened and goes off when luggage compartment door is closed.

### WIRING DIAGRAM

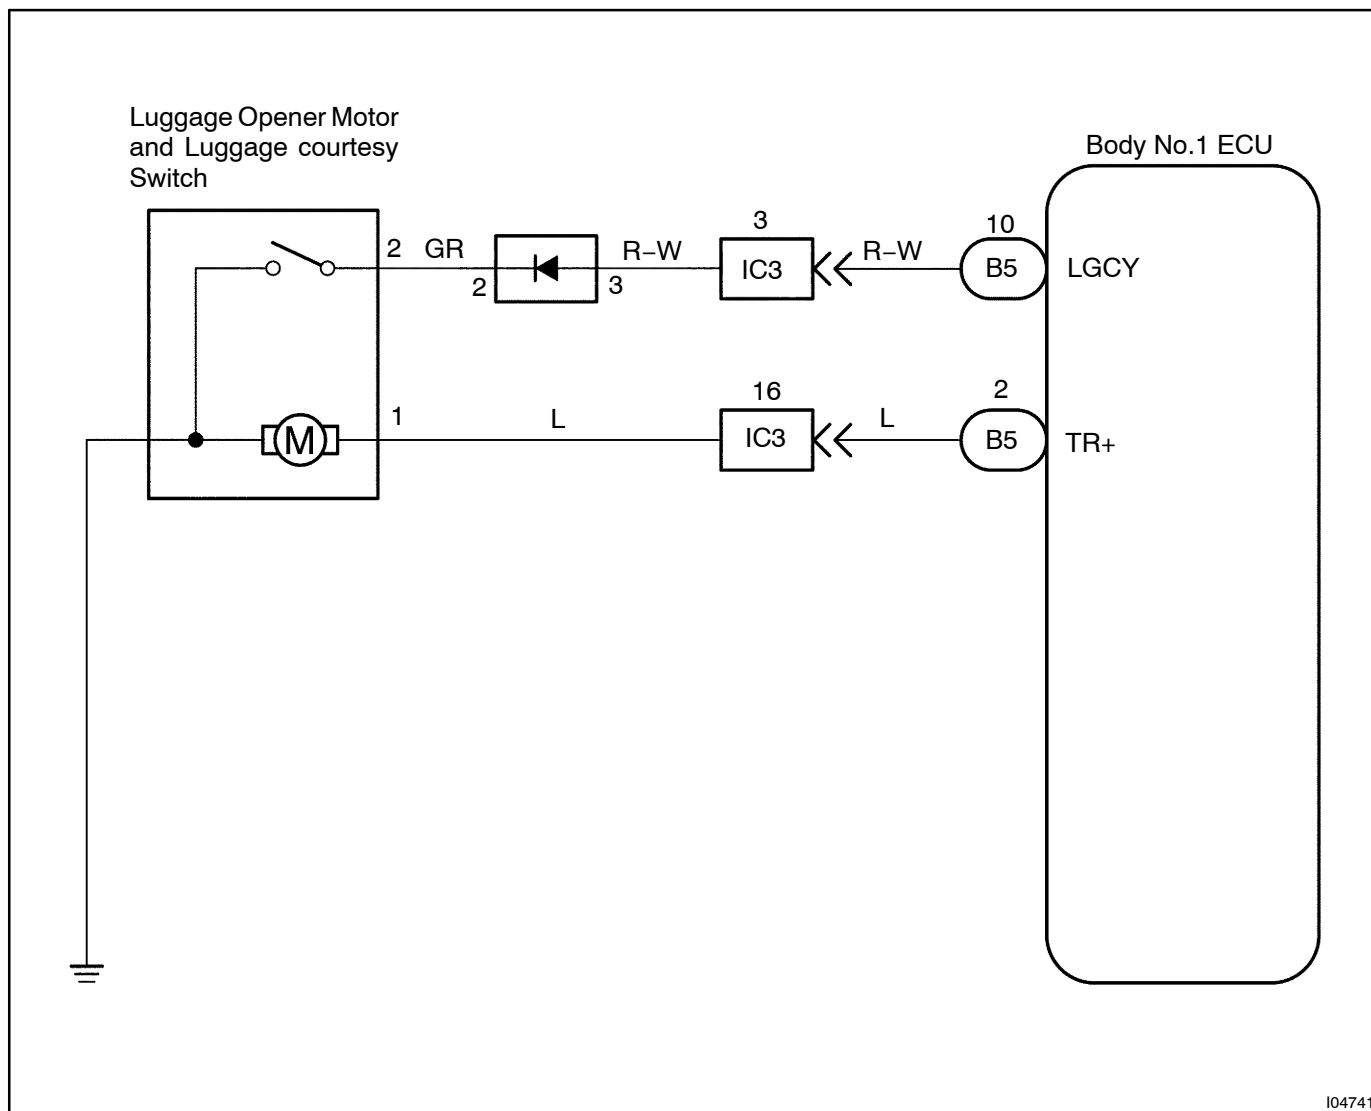

I04741

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

**1** Check luggage courtesy switch using LEXUS hand-held tester.

### PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

### CHECK:

Check the luggage courtesy switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-616).

NG

**2** Check luggage courtesy switch (See page BE-66).

NG

Replace the luggage courtesy switch.

OK

**3** Check wireharness and connector between luggage courtesy switch and body No.1 ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.  
(See page DI-628)