


Door lock motor circuit

WIRING DIAGRAM

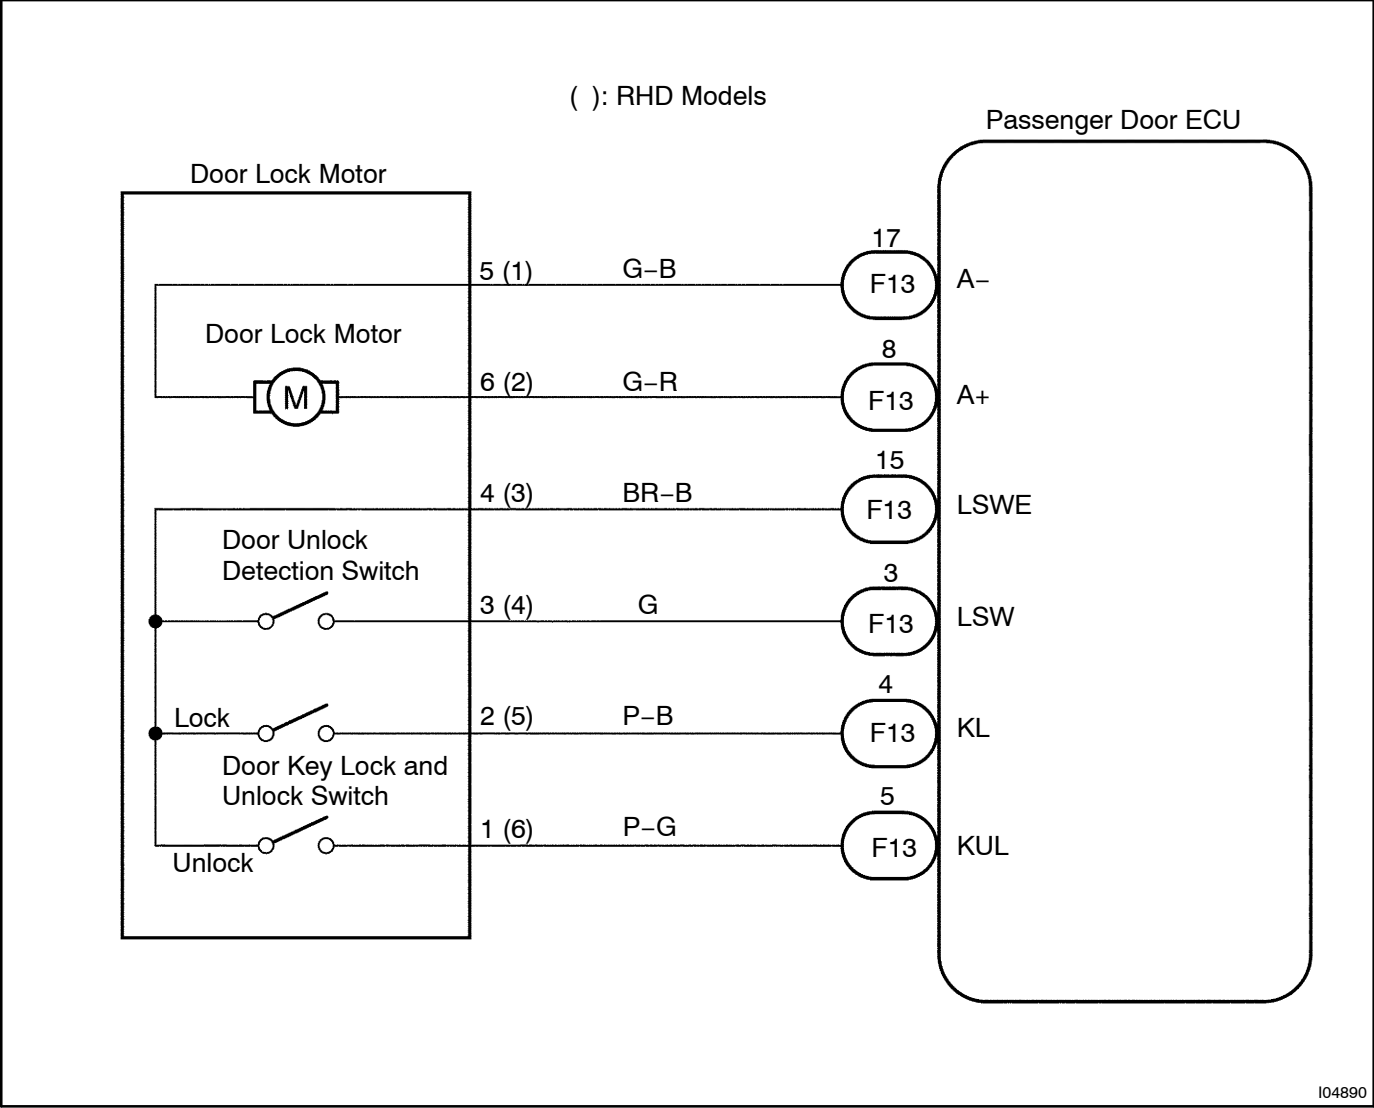

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check door lock motor using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check that the door lock motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptom table. (See page DI-616)

NG

2 Check door lock motor. (See page BE-148)

NG

Replace the door lock motor.

OK

3 Check wireharness and connector between door lock motor and driver door ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)