


## Mirror retract motor circuit (G.C.C. countries only)

### WIRING DIAGRAM

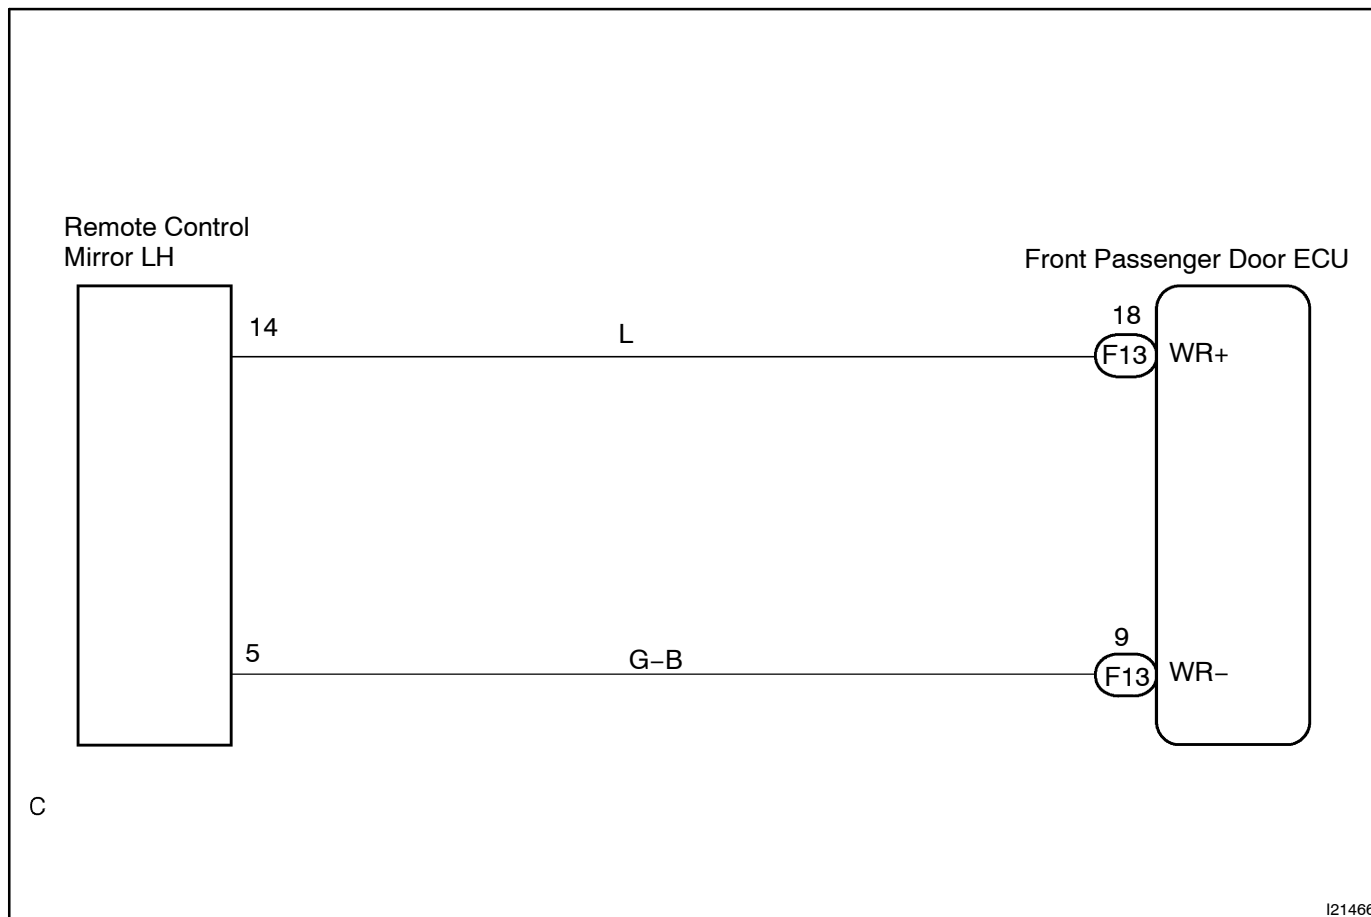

### INSPECTION PROCEDURE

#### HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check mirror retract motor using hand-held tester.
---	--

#### PREPARATION:

Connect the mirror retract hand-held tester to the DLC3.

#### CHECK:

Check the mirror retract motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem/symptoms table. (See page DI-668)

NG

**2** Check mirror retract motor. (See page BE-21)

NG

Replace the mirror retract switch.

OK

**3** Check wireharness and connector between mirror retract motor and front passenger door ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.  
(See page DI-668)