


# TURN SIGNAL AND HAZARD WARNING SYSTEM LOCATION

BEOMX-01

## LHD Models


Engine Room No.1 Junction Block  
● TURN HAZ Fuse

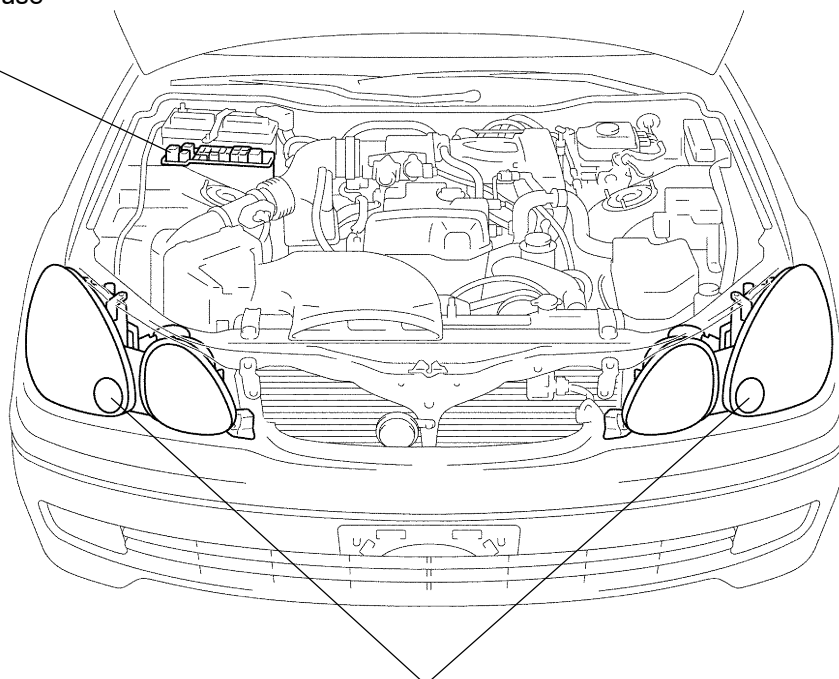

Turn Signal Lights

## RHD Models

Engine Room No.1 Junction Block  
● TURN HAZ Fuse

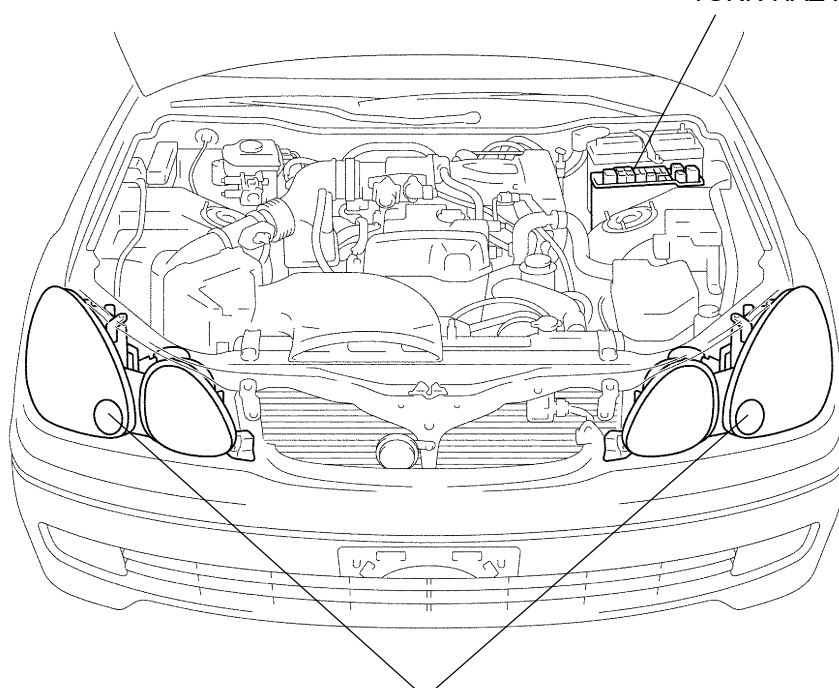

Turn Signal Lights

I05743

