


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 3UZ-FE]

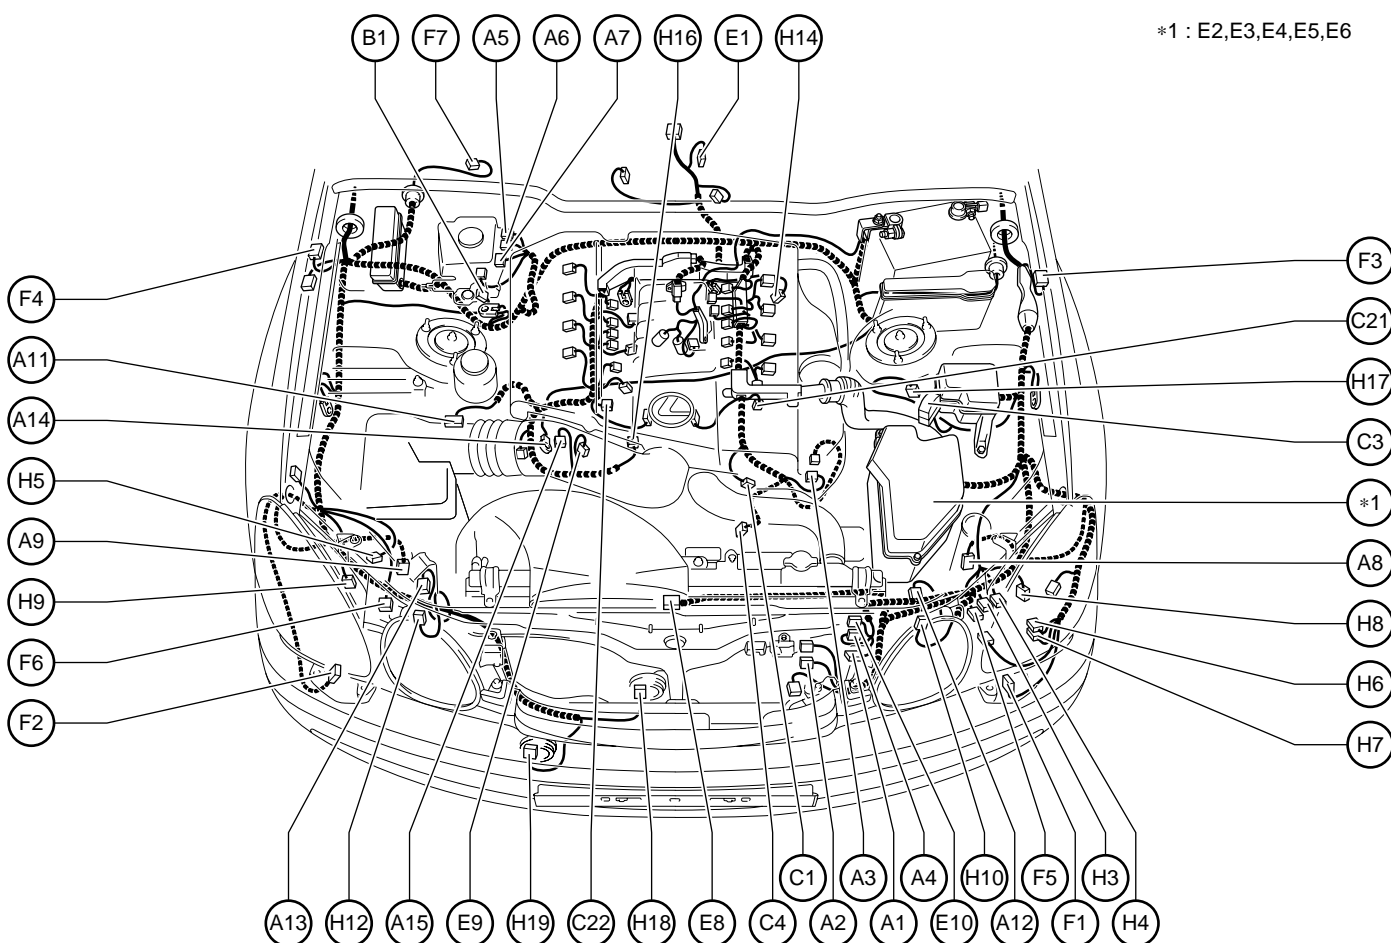

*1 : E2,E3,E4,E5,E6

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 3 A/C Magnetic Clutch and Lock Sensor
 A 4 A/C Triple Pressure SW
 (A/C Dual and Single Pressure SW)
 A 5 ABS & TRC & VSC Actuator
 A 6 ABS & TRC & VSC Actuator
 A 7 ABS & TRC & VSC Actuator
 A 8 ABS Speed Sensor Front LH
 A 9 ABS Speed Sensor Front RH
 A 11 Air Flow Meter
 A 12 Airbag Sensor Front LH
 A 13 Airbag Sensor Front RH
 A 14 Alternator
 A 15 Alternator

B 1 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
 C 3 Check Connector
 C 4 Crankshaft Position Sensor
 C21 Camshaft Timing Oil Control Valve LH
 C22 Camshaft Timing Oil Control Valve RH

E 1 ECT Solenoid
 E 2 Engine and ECT ECU
 E 3 Engine and ECT ECU
 E 4 Engine and ECT ECU

E 5 Engine and ECT ECU
 E 6 Engine and ECT ECU
 E 8 Engine Hood Courtesy SW
 E 9 Engine Oil Level Sensor
 E 10 Exhaust Gas Sensor

F 1 Front Fog Light LH
 F 2 Front Fog Light RH
 F 3 Front Side Turn Signal Light LH
 F 4 Front Side Turn Signal Light RH
 F 5 Front Turn Signal and Clearance Light LH
 F 6 Front Turn Signal and Clearance Light RH
 F 7 Front Wiper Motor

H 3 Headlight Beam Level Control ECU
 H 4 Headlight Beam Level Control ECU
 H 5 Headlight Beam Level Control Motor
 H 6 Headlight Cleaner Control Relay
 H 7 Headlight Cleaner Motor
 H 8 Headlight Control ECU LH
 H 9 Headlight Control ECU RH
 H 10 Headlight LH (High)
 H 12 Headlight RH (High)
 H 14 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H 16 Heated Oxygen Sensor (Bank 2 Sensor 1)
 H 17 Height Control Sensor (Front)
 H 18 Horn LH
 H 19 Horn RH