


REMOVAL

1. REMOVE ENGINE UNDER COVER
2. DRAIN ENGINE COOLANT
3. REMOVE AIR CLEANER INLET
4. REMOVE AIR CLEANER ASSEMBLY
5. REMOVE RADIATOR AND ELECTRIC COOLING FAN AND RESERVOIR TANK ASSEMBLY
 - (a) Disconnect these parts:
 - Upper radiator hose from radiator
 - Lower radiator hose from radiator
 - ECM outlet duct from ECM box
 - Wire for electric cooling fan from clamp on electric cooling fan
 - 2 electric cooling fan connectors
 - ECT switch connector for electric cooling fan
 - 2 oil cooler hoses for A/T from radiator
 - Lower reservoir tank hose from reservoir tank

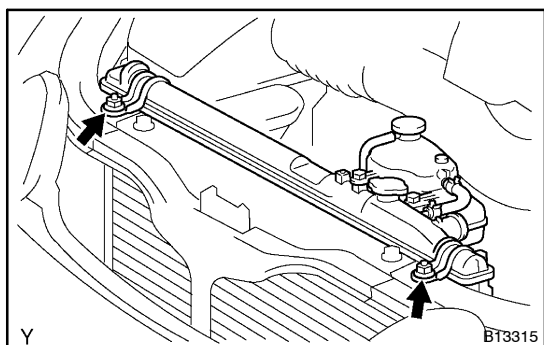

- (b) Remove the 2 nuts and 2 upper radiator supports.
 - (c) Lift out the radiator and cooling fan assembly.
 - (d) Remove the 2 lower radiator supports.
6. REMOVE RESERVOIR TANK FROM RADIATOR AND ELECTRIC COOLING FAN
 - (a) Disconnect the upper reservoir tank hose from the radiator.
 - (b) Remove the 2 bolts from the radiator.
 - (c) Remove the lower reservoir tank support.
7. REMOVE ELECTRIC COOLING FAN FROM RADIATOR

Remove the 6 bolts and electric cooling fan.