


DTC	B1255 / 55	Body No.2 P1 switch malfunction
-----	------------	---------------------------------

CIRCUIT DESCRIPTION

This DTC is output when failure of P1 switch is detected.

DTC No.	DTC Detecting Condition	Trouble Area
B1255/55	ON stick of P1 switch	• P1 switch • Wireharness

WIRING DIAGRAM

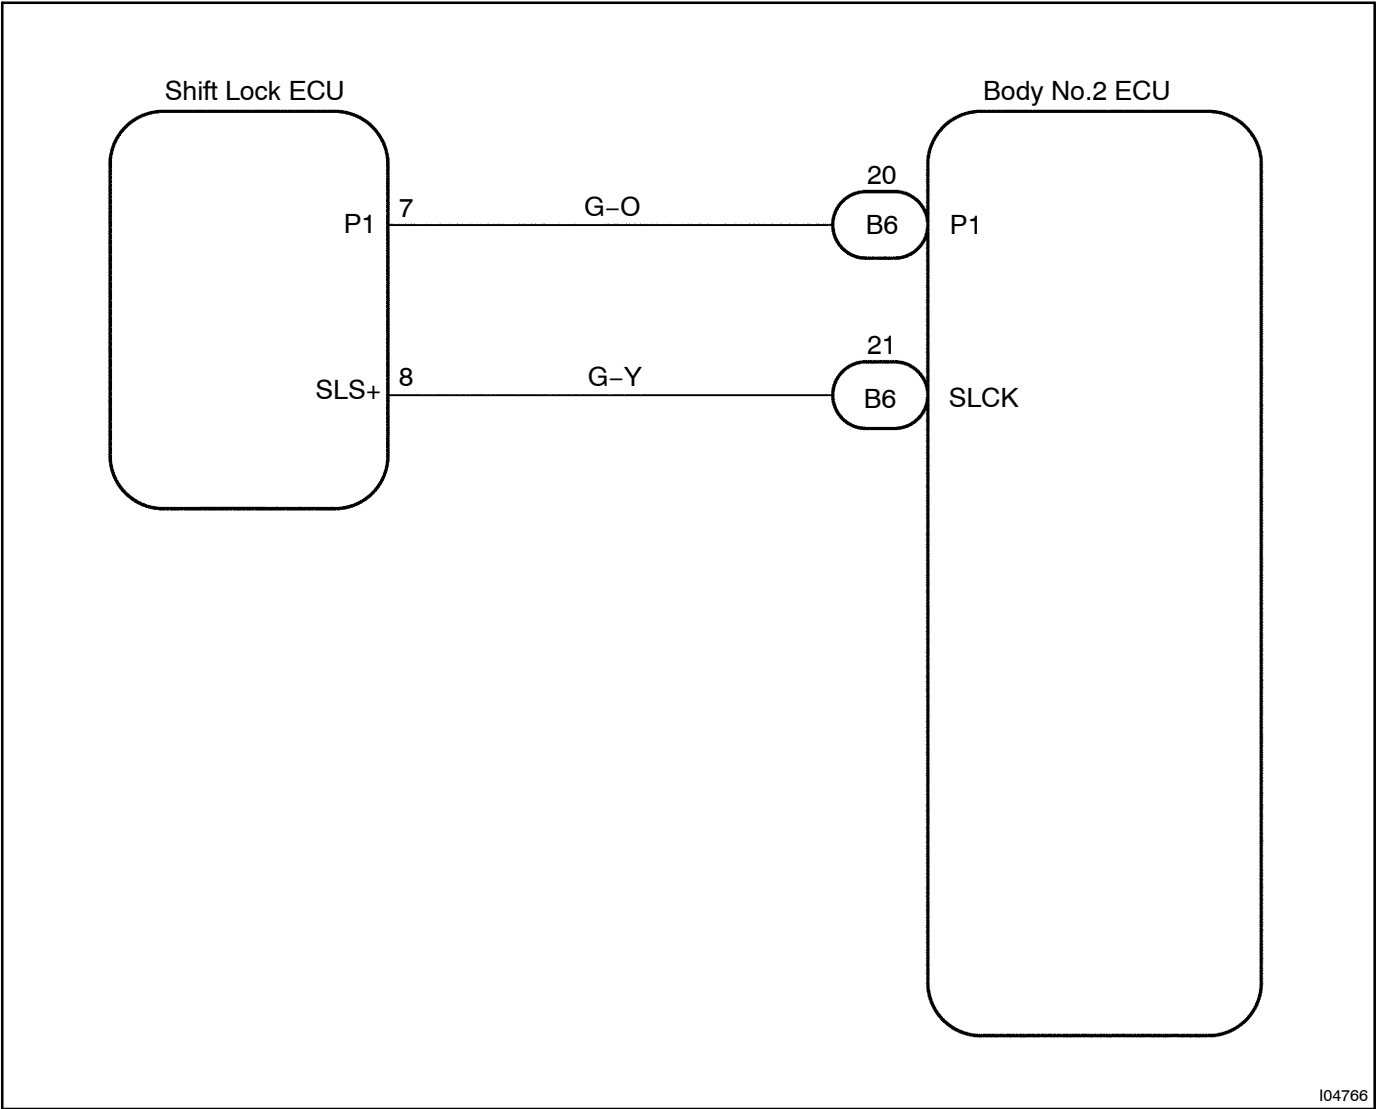

INSPECTION PROCEDURE

1 ☐ Check the P1 switch. (See page AT-19)

NG

Replace the P1 switch.

OK

2 ☐ Check wireharness and connector.

NG

Repair or replace wireharness and connector.

OK

Replace the body No.2 ECU.