


Power window motor circuit

WIRING DIAGRAM

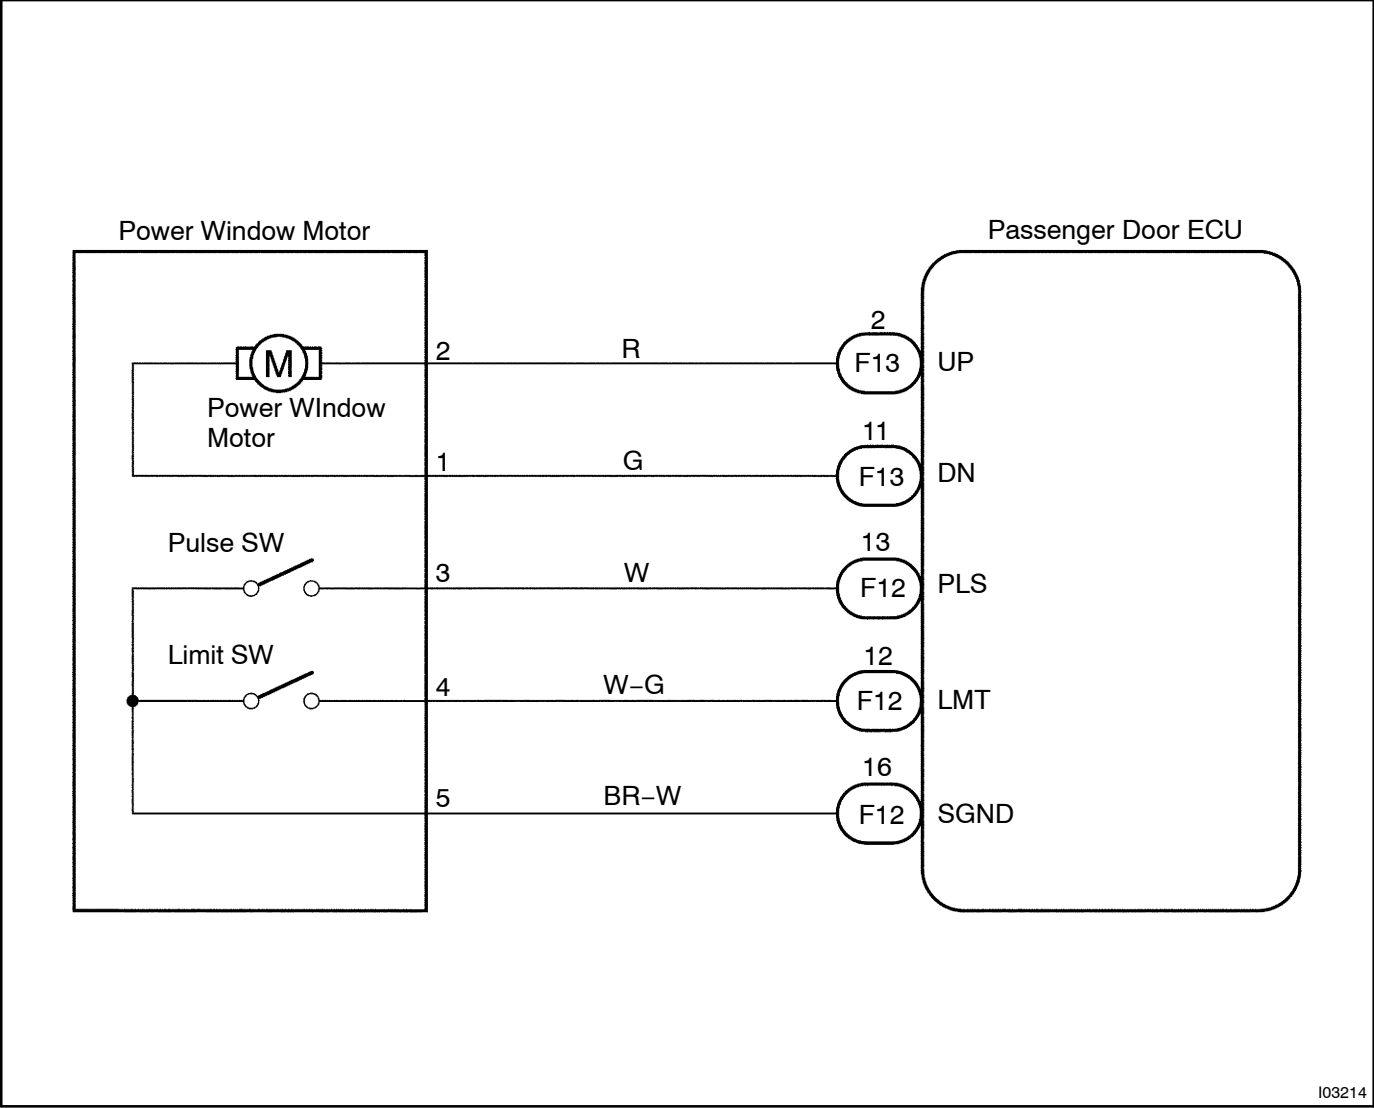

I03214

INSPECTION PROCEDURE

HINT:
In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1

Check power window motor using LEXUS hand-held tester.

PREPARATION:
Connect the LEXUS hand-held tester to the DLC3.
CHECK:
Check that the power window motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-738)

NG

2

Check power window motor. (See page BE-134)

NG

Replace the power window motor.

OK

3

Check wireharness and connector between power window motor and passenger door ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-738)