


INSTALLATION


1. INSTALL FUEL PRESSURE REGULATOR AND FUEL RETURN JET TUBE ASSEMBLY

- Apply a tight coat of gasoline to a new O-ring, and install it to the fuel pressure regulator.
- Push in the fuel pressure regulator to the fuel filter.
- Check that the fuel pressure regulator rotates smoothly. If it does not rotate smoothly, the O-ring may be pinched, so remove the fuel pressure regulator and perform again steps (b) and (c) above.
- Connect the fuel return jet tube to the clamp of the No.2 fuel suction support.

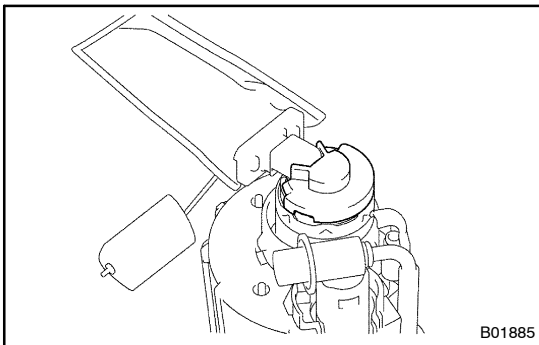

2. INSTALL NO.2 FUEL SUCTION SUPPORT

- Install the rubber cushion to the fuel pump.

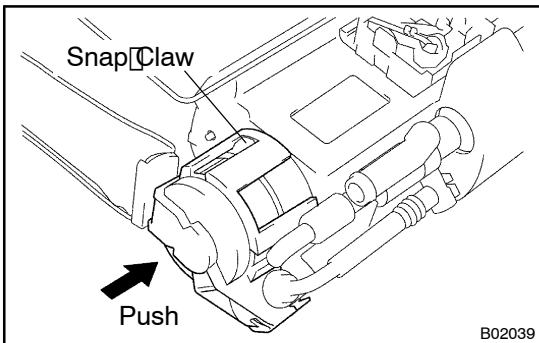

- Push the fuel suction support and attach the 4 snap claws to the claw holes.

3. INSTALL FUEL PUMP AND SENDER GAUGE ASSEMBLY TO FUEL TANK (See page FI-19)