


Power Seat Motor

WIRING DIAGRAM

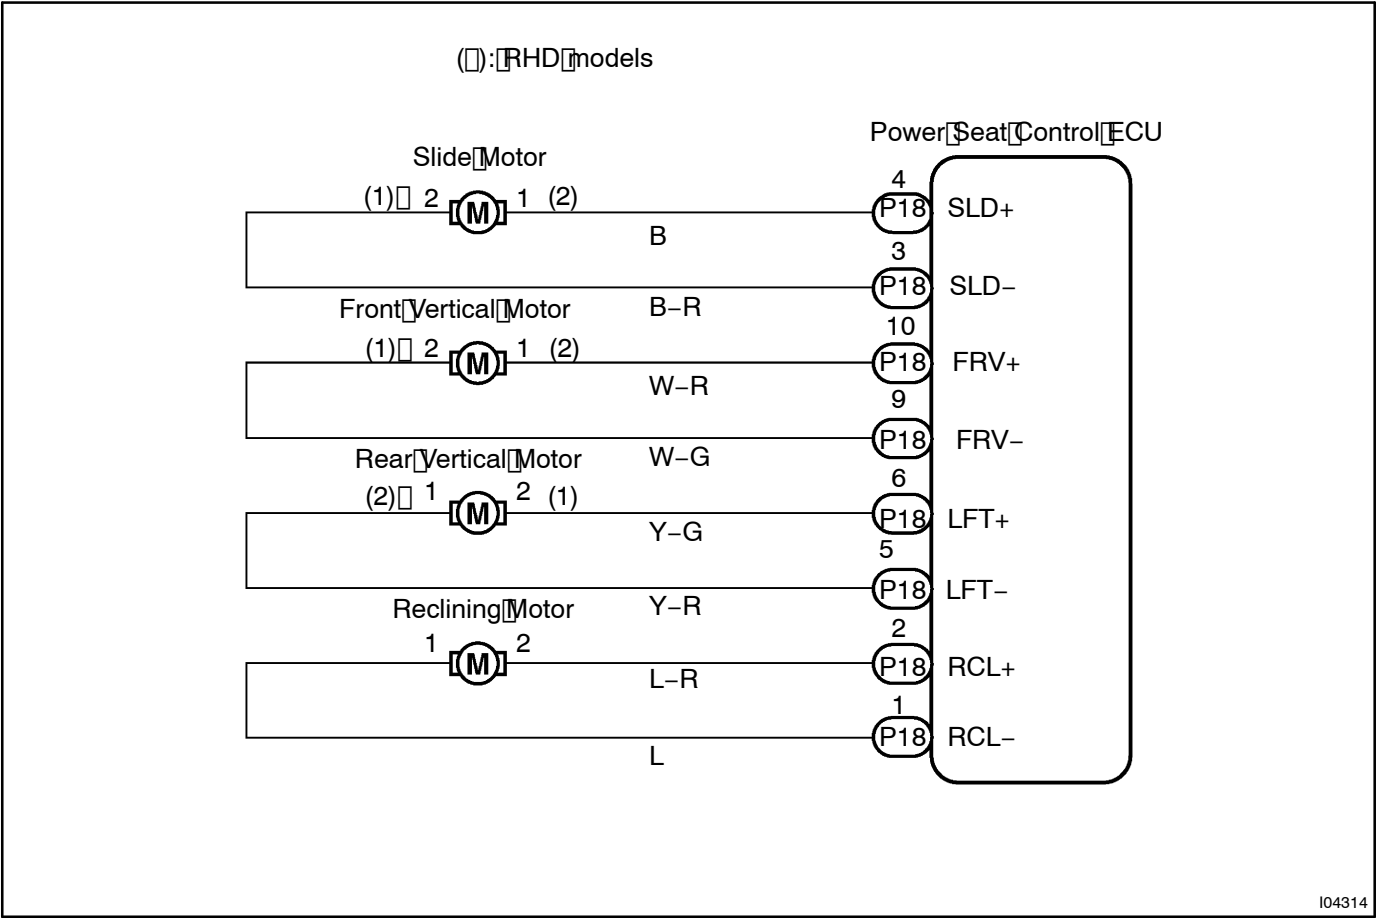

INSPECTION PROCEDURE

HINT:
If there is not the LEXUS hand-held tester, begin with STEP 2.

1	Perform active test.
---	----------------------

PREPARATION:

- (a) Connect the LEXUS hand-held tester to the DLC3.
- (b) Turn ignition switch ON and LEXUS hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the LEXUS hand-held tester.

CHECK:

Check that "Power seat motor" operates as the LEXUS hand-held tester directs.

OK:

The seat operates normally.

OK

Proceed to next circuit inspection shown in problem symptoms table (See page DI-522).

NG

2 Check power seat motor. (See page BE-181)

NG Replace the motor.

OK

3 Check harness and connector between Power Seat Position ECU and motor (See page N-19).

OK Repair or replace harness or connctor.

NG

Proceed to next circuit inspection shown in problem symptoms table (See page DI-522).