


## Door courtesy light and courtesy switch circuit

### CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

### WIRING DIAGRAM

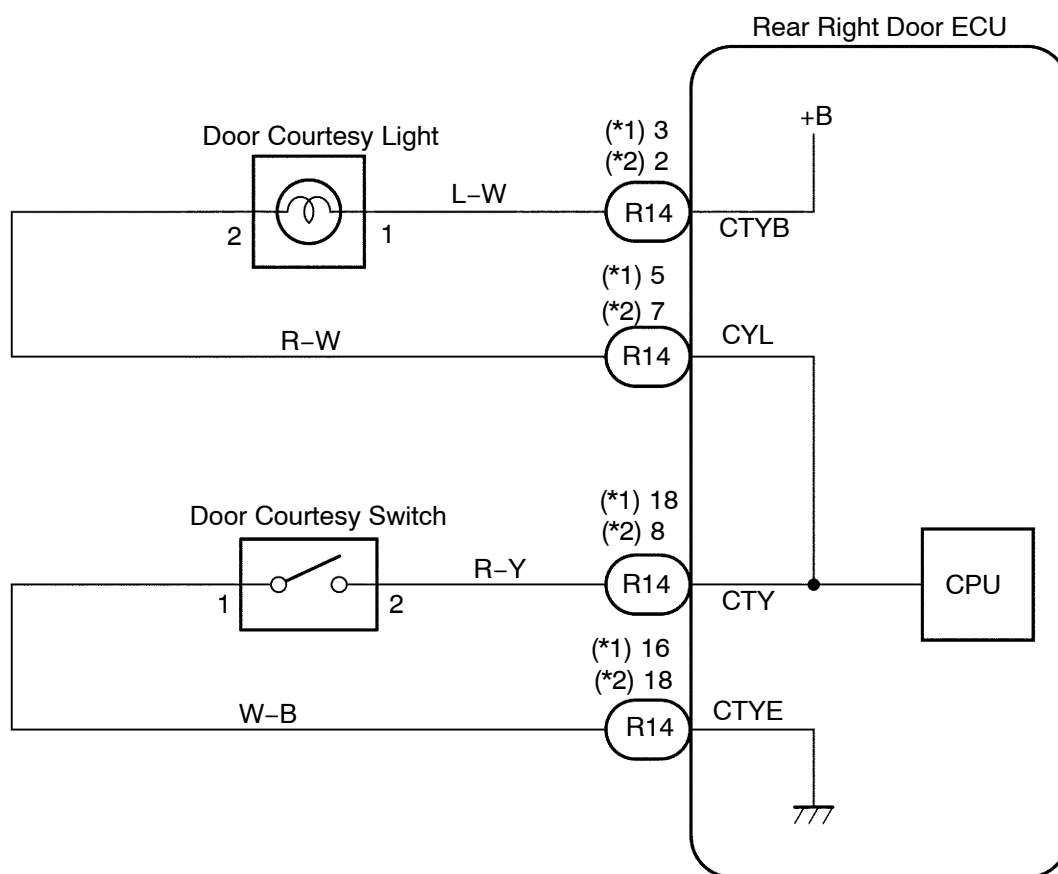

(\*1): w/ Double locking system

(\*2) w/o Double locking system

I03216

INSPECTION PROCEDURE

1	Check operation of door courtesy light.
---	-----------------------------------------

CHECK:

Check that door courtesy light comes on when door opened, and goes off when door is closed.

OK:

Must be operated normally.

OK

Proceed to next circuit inspection shown on problem symptom table (See Pub. No. RM588E on page DI-616).

NG

2	Check courtesy light. (See Pub. No. RM588E on page BE-66)
---	-----------------------------------------------------------

NG

Replace the courtesy light.

OK

3	Check courtesy switch. (See page BE-3)
---	----------------------------------------

NG

Replace the courtesy switch.

OK

**4****Check wireharness and connector between courtesy light and rear right door ECU, courtesy switch and rear right door ECU.****NG****Repair or replace wireharness or connector.****OK****Proceed to next circuit inspection shown on problem symptoms table (See Pub. No. RM588E on page DI-616).**