



INSTALLATION

1. INSTALL SLIDING ROOF HOUSING

- (a) Install the sliding roof housing with the 6 nuts to the body.
Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)
- (b) Install the 6 brackets with the 12 bolts.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (c) Connect the 4 drain hoses with the 4 clips to the housing.

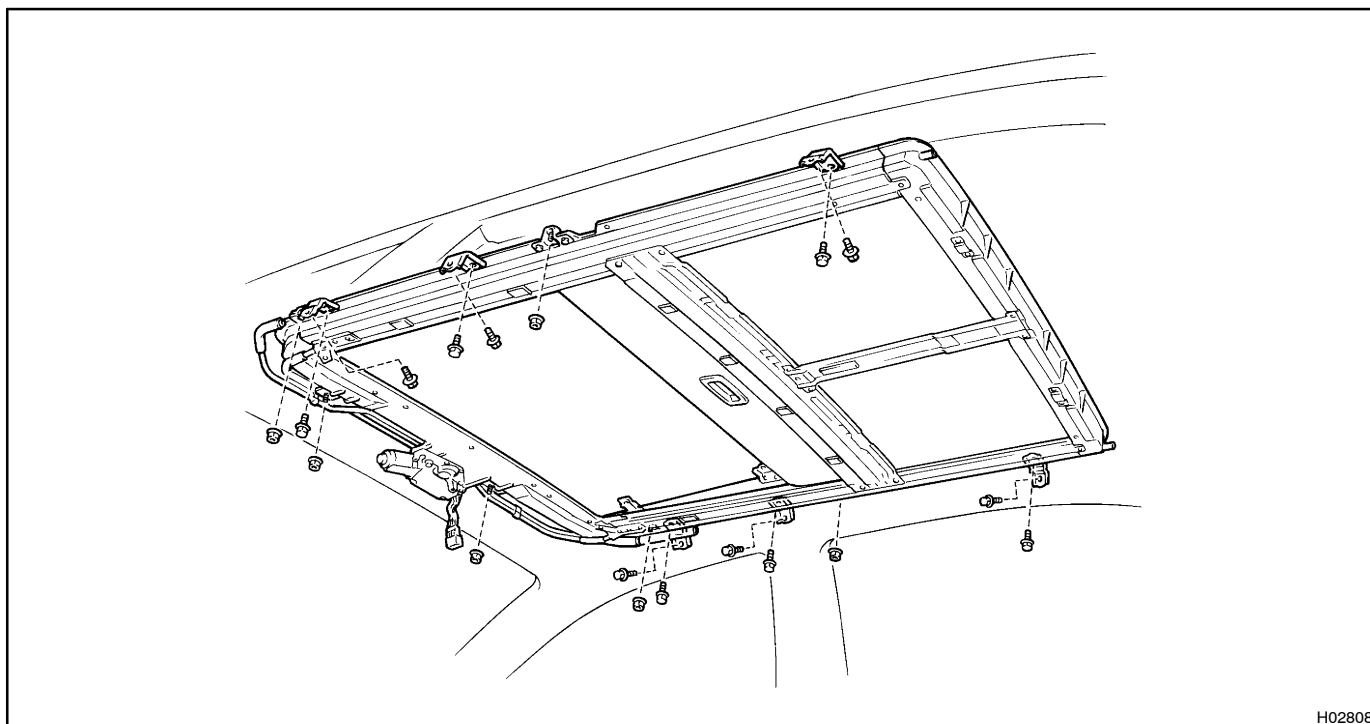


H02808

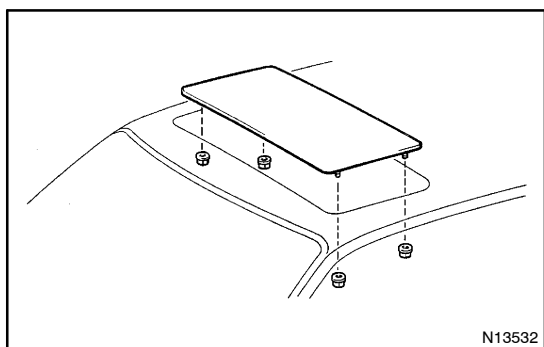

N13532

2. INSTALL SLIDING ROOF GLASS

- Install the sliding roof glass with the 4 nuts.
Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)

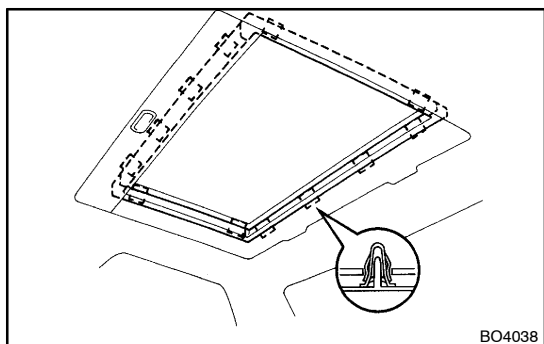

BO4038

3. INSTALL SLIDING ROOF GARNISHES

- Install the sliding roof garnishes to the body.

4. INSTALL ROOF HEADLINING (See page BO-31)