


## RADIATOR FAN MAIN RELAY INSPECTION


CO16K-01

1. REMOVE RELAY BOX COVER
2. REMOVE RADIATOR FAN MAIN RELAY (Marking: RAD FAN MAIN)

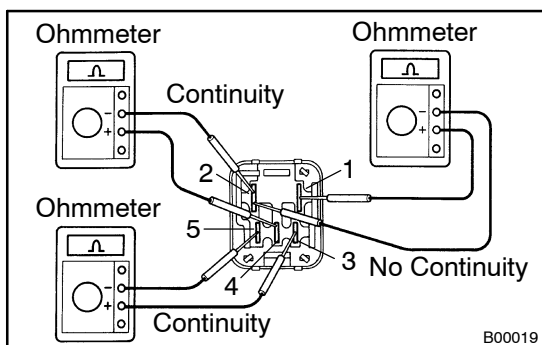

### 3. INSPECT RADIATOR FAN MAIN RELAY

- (a) Inspect the relay continuity
  - (1) Using an ohmmeter, check that there is continuity between terminals 3 and 5.  
If there is no continuity, replace the relay.
  - (2) Check that there is continuity between terminals 2 and 4.  
If there is no continuity, replace the relay.
  - (3) Check that there is no continuity between terminals 1 and 2.  
If there is continuity, replace the relay.

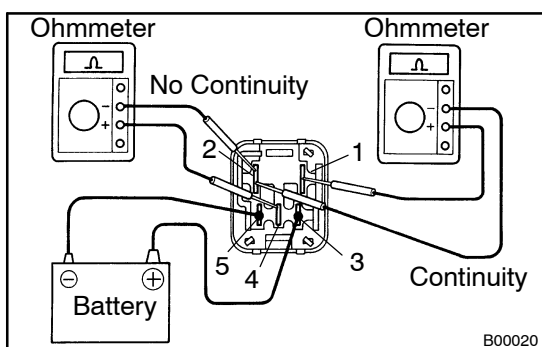

- (b) Inspect the relay operation
    - (1) Apply battery positive voltage across terminals 3 and 5.
    - (2) Using an ohmmeter, check that there is no continuity between terminals 2 and 4.  
If there is continuity, replace the relay.
    - (3) Check that there is continuity between terminals 1 and 2.  
If there is no continuity, replace the relay.
4. REINSTALL RADIATOR FAN MAIN RELAY
  5. REINSTALL RELAY BOX COVER