


# ELECTRICAL WIRING ROUTING

## Position of Parts in Instrument Panel

[LHD]

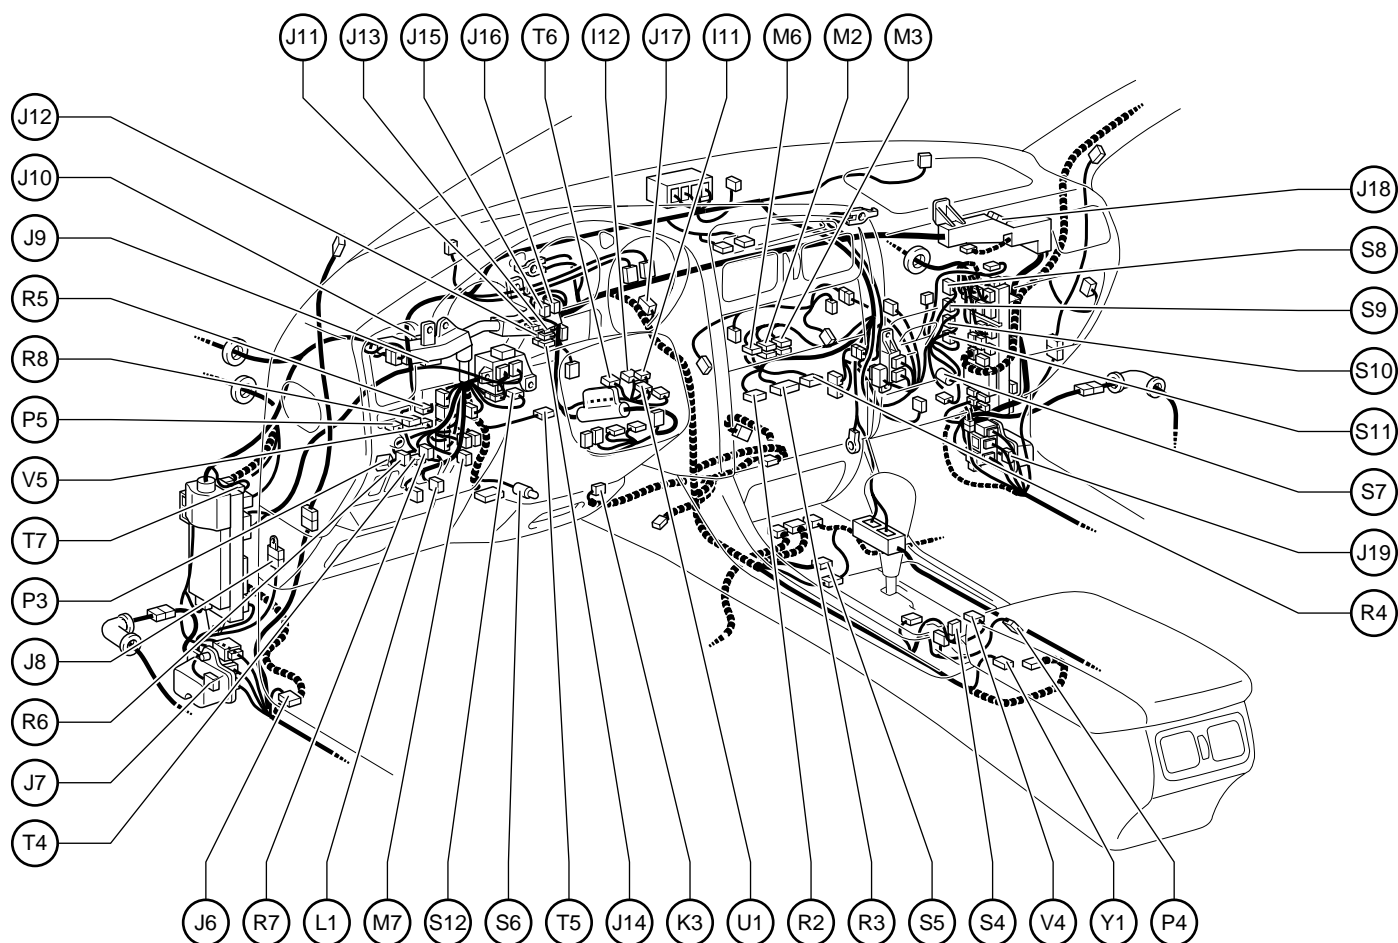

I 11 Ignition Key Cylinder Light  
I 12 Ignition SW

J 6 Junction Connector  
J 7 Junction Connector  
J 8 Junction Connector  
J 9 Junction Connector  
J 10 Junction Connector  
J 11 Junction Connector  
J 12 Junction Connector  
J 13 Junction Connector  
J 14 Junction Connector  
J 15 Junction Connector  
J 16 Junction Connector  
J 17 Junction Connector  
J 18 Junction Connector  
J 19 Junction Connector

K 3 Kick Down SW

L 1 Luggage Compartment Door Opener SW

M 2 Multi-Display  
M 3 Multi-Display  
M 6 Multi-Display  
M 7 Mirror Retractor SW

P 3 Parking Brake SW  
P 4 Power Outlet  
P 5 PPS ECU

R 2 Radio and Player  
R 3 Radio and Player  
R 4 Radio and Player  
R 5 Rear Fog Light Relay  
R 6 Rear Fog Light SW  
R 7 Remote Control Mirror SW  
R 8 Rheostat

S 4 Seat Heater SW  
S 5 Shift Lock Control ECU  
S 6 Step Light LH  
S 7 Step Light RH  
S 8 Stereo Component Amplifier  
S 9 Stereo Component Amplifier  
S 10 Stereo Component Amplifier  
S 11 Stereo Component Amplifier  
S 12 Stop Light SW

T 4 Telephone Microphone  
T 5 Tilt and Telescopic ECU  
T 6 Transponder Key Amplifier  
T 7 Turn Signal Flasher

U 1 Unlock Warning SW and Key Interlock Solenoid

V 4 VSC Off SW  
V 5 VSC Warning Buzzer

Y 1 Yaw Rate Sensor