


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in ON or ACC position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

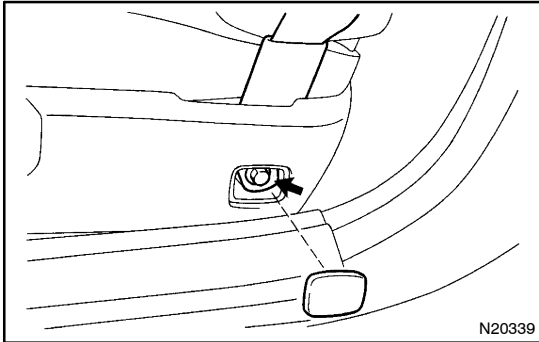

1. REMOVE FRONT SEAT OUTER BELT FLOOR ANCHOR

- (a) Using a screwdriver, remove the seat belt anchor cover cap.

HINT:

Tape the screwdriver tip before use.


- (b) Remove the front seat outer belt floor anchor.

2. REMOVE FRONT SEAT

- (a) Using a screwdriver, remove the 4 seat track covers.

HINT:

Tape the screwdriver tip before use.

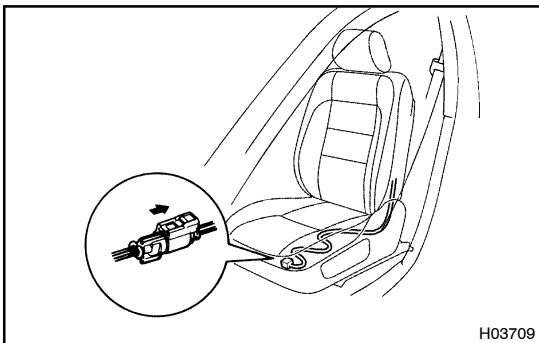

- (b) Remove the 4 bolts, then disconnect the airbag connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (c) Remove the front seat.


3. REMOVE SIDE AIRBAG ASSEMBLY WIRE HARNESS

- (a) Remove the connector from the bracket.
 (b) Remove the 5 clamps and wire harness from the seat cushion frame


4. REMOVE THESE PARTS:

(See page BO-109)


- (a) Power seat switch knobs
- (b) Front seat cushion shield
- (c) Front seat inner shield
- (d) Seat cushion assembly
- (e) Reclining adjuster inside cover LH
- (f) Front seatback board
- (g) Seatback assembly

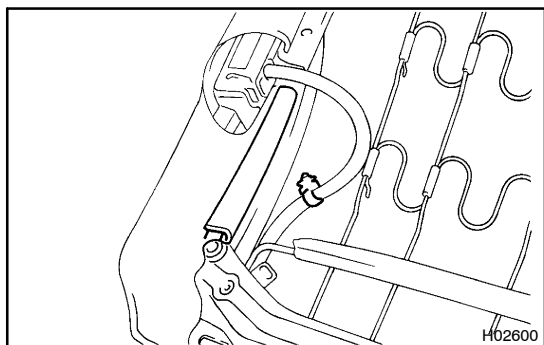**5. REMOVE SIDE AIRBAG ASSEMBLY**

- (a) Remove the clamp.
- (b) Remove the hook.

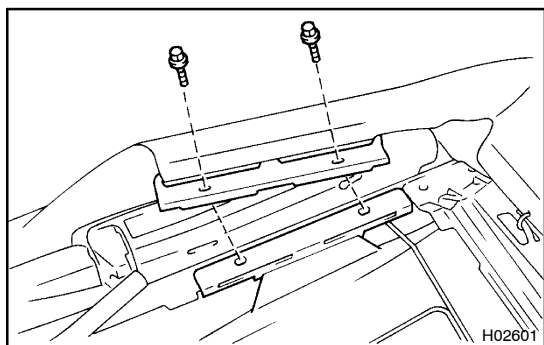

- (c) Remove the 2 bolts and 2 hooks.

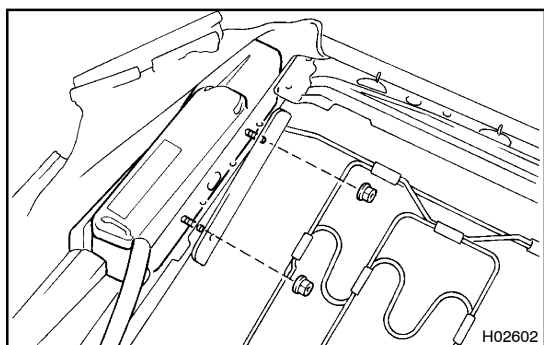

- (d) Remove the 2 nuts and side airbag assembly.

CAUTION:

- **Do not store the side airbag assembly with the airbag deployment side facing down.**
- **Never disassemble the side airbag assembly.**