



Position of Parts in Seat (LHD)

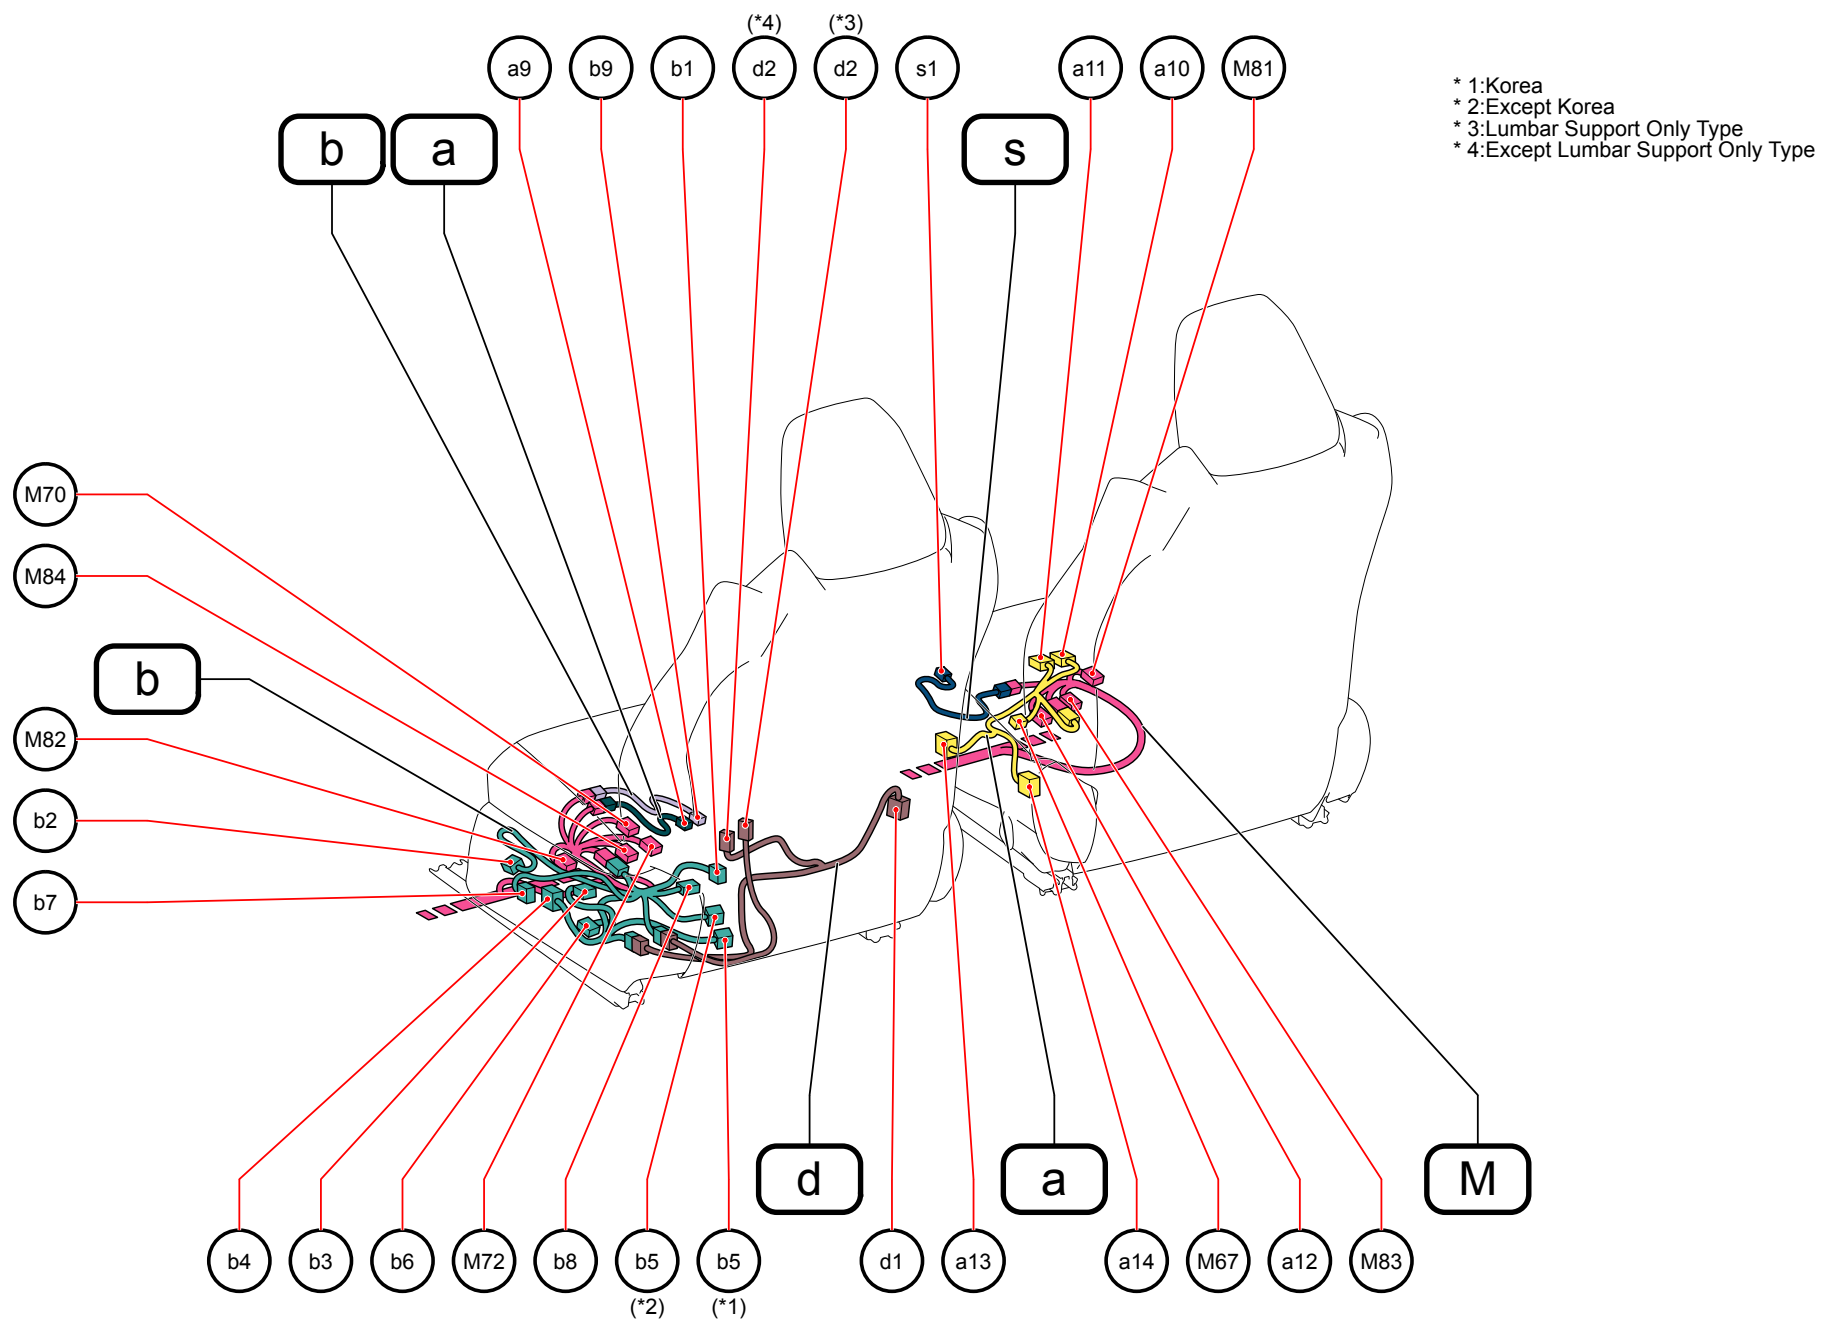


Position of Parts in Seat (LHD)

M67	Front Seat Inner Belt Assembly RH
M70	Front Seat Inner Belt Assembly LH
M72	Front Seat Inner Belt Assembly LH
M81	Front Seat Cushion Heater Assembly RH
M82	Front Seat Cushion Heater Assembly LH
M83	Front Seat Airbag Assembly RH
M84	Front Seat Airbag Assembly LH
a9	Seat Position Airbag Sensor
a10	Occupant Detection ECU
a11	Occupant Detection ECU
a12	Front Seat Inner Belt Assembly RH
a13	Front in Weight Detection Sensor Sub-Assembly
a14	Rear in Weight Detection Sensor Sub-Assembly
b1	Front Power Seat Slide Position Motor LH (Front Seat Adjuster Assembly LH)
b2	Front Power Seat Tilt Position Motor LH (Front Seat Adjuster Assembly LH)
b3	Front Power Seat Lift Position Motor LH (Front Seat Adjuster Assembly LH)
b4	Front Power Seat Switch LH
b5	Front Seat Cushion Heater Assembly LH
b6	No. 28 Junction Connector
b7	Front Lumbar Power Seat Switch LH
b8	Condenser
b9	Seat Position Airbag Sensor
d1	Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)
d2	Front Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)
s1	Front Seat Cushion Airbag Assembly RH

Position of Parts in Seat (LHD)

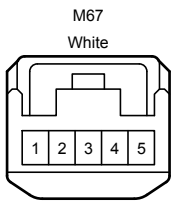


90980-12366

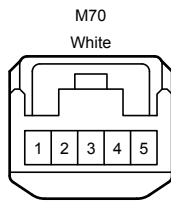


90980-12366




90980-10942

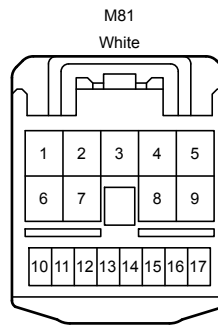


90980-12374

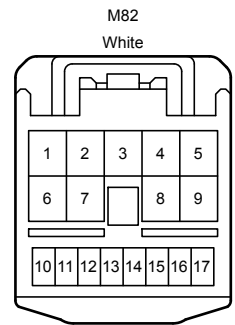


90980-12374

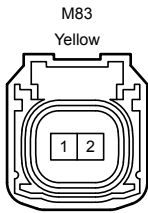


90980-12698

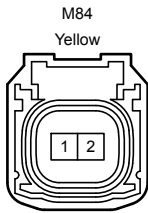


90980-12698

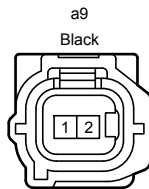

90980-12416

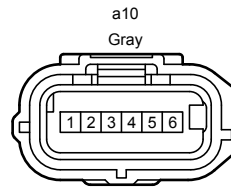


90980-12303

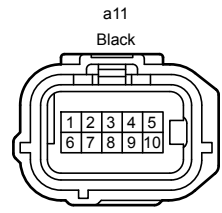


90980-12380




90980-11155

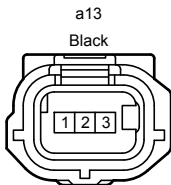


90980-12353

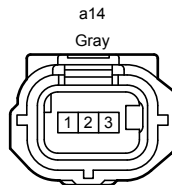


90980-12354




90980-12341




90980-12341




90980-12341

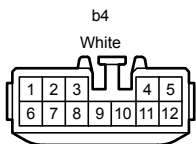


90980-10803

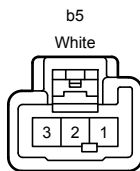


90980-11763

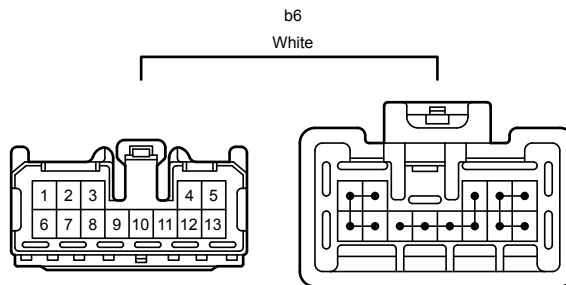


90980-12346

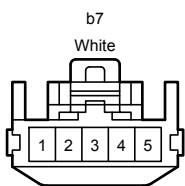


90980-12348

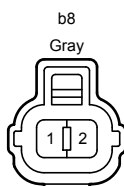


90980-10843

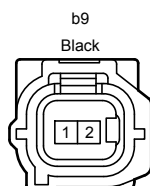


90980-12416

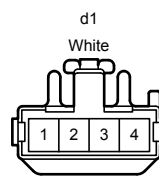

90980-12335



90980-12341



90980-12452