

OUTER REAR VIEW MIRROR COVER REMOVAL

CAUTION / NOTICE / HINT

Tech Tips

- Use the same procedure for the RH side and LH side.
- The following procedure is for the LH side.


PROCEDURE

1. REMOVE OUTER MIRROR

[Click here](#)

2. REMOVE OUTER MIRROR COVER

- a. Disengage the 8 claws and 2 guides to remove the outer mirror cover as shown in the illustration.

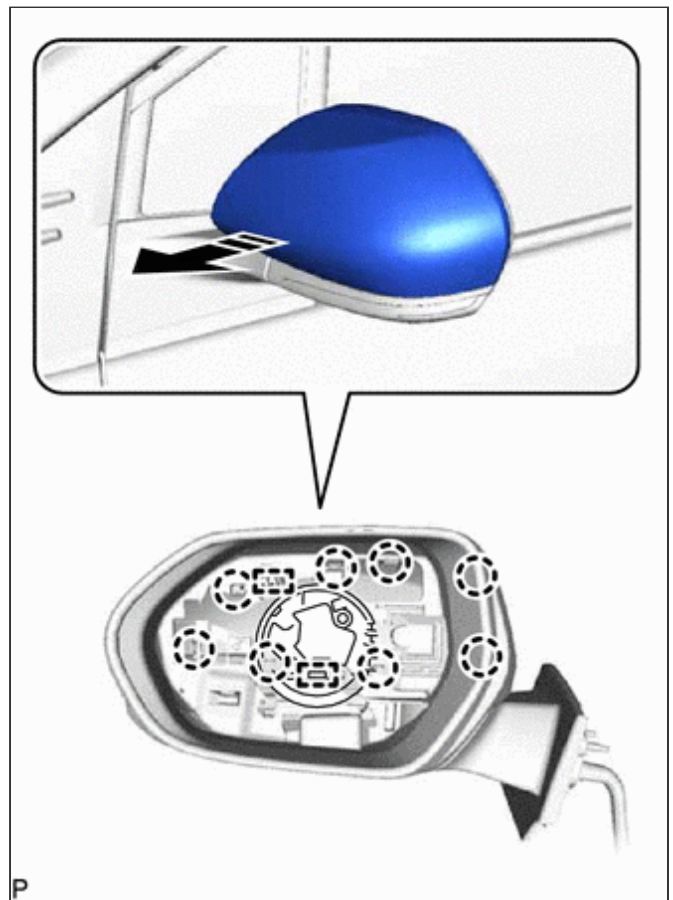

Remove in this Direction