



Door lock motor circuit

WIRING DIAGRAM

LHD models:

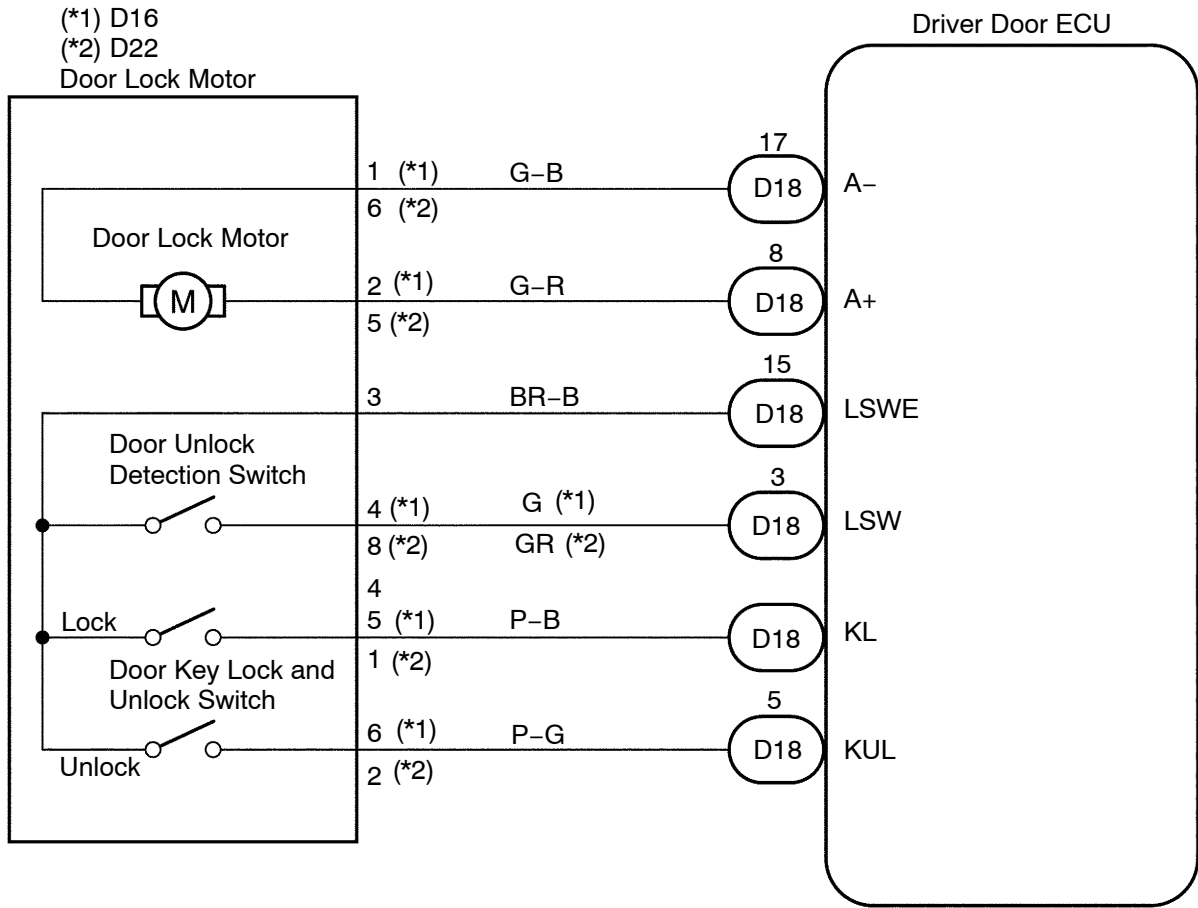

(*1) : w/o Double locking system
(*2): w/ Double locking system

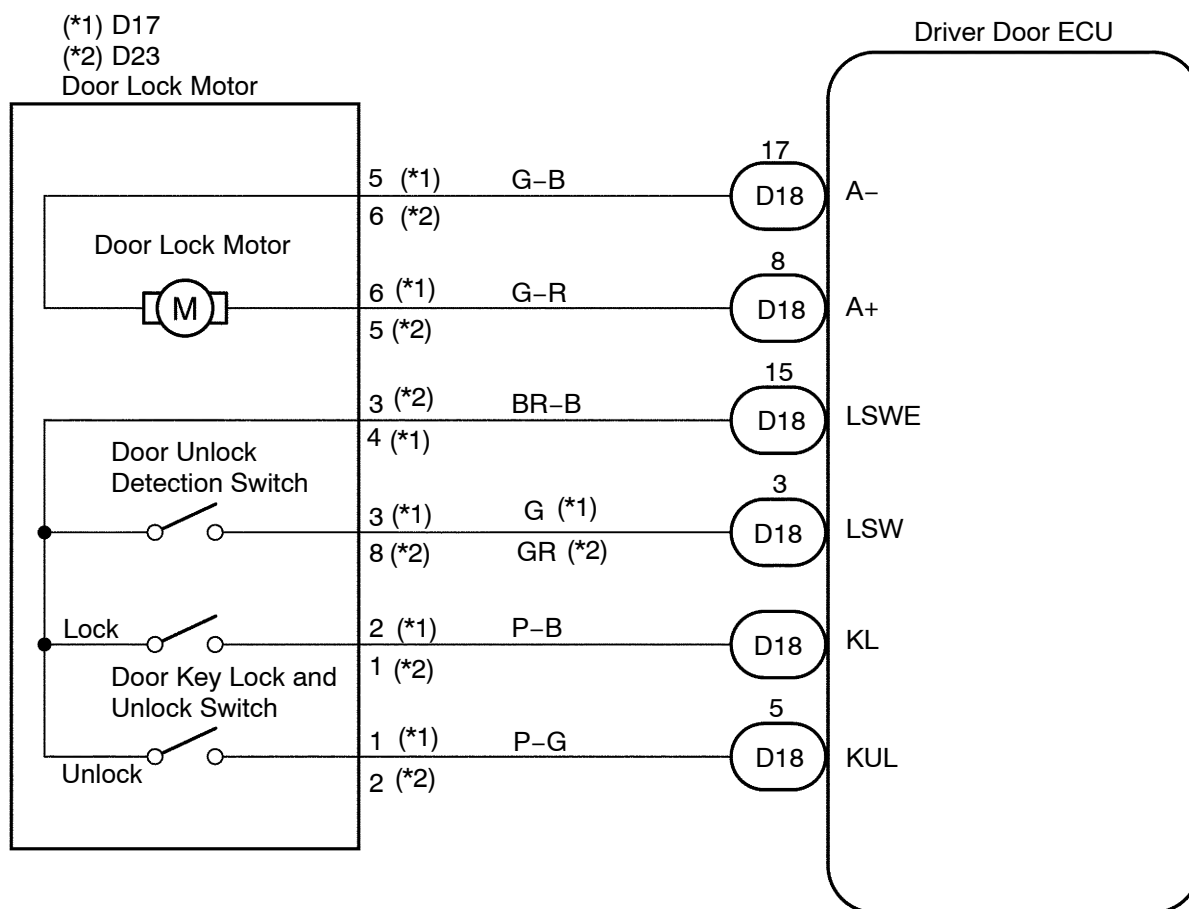RHD models:

(*1) : w/o Double locking system

(*2): w/ Double locking system

104890

INSPECTION PROCEDURE**HINT:**

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check door lock motor using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check that the door lock motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptom table. (See Pub. No. RM588E on page DI-616)

NG

- | | |
|----------|---|
| 2 | Check door lock motor
(w/o double locking system: See Pub. No. RM588E on page BE-148
w/ double locking system: See page BE-12 .) |
|----------|---|

NG

Replace the door lock motor.

OK

- | | |
|----------|---|
| 3 | Check wireharness and connector between door lock motor and driver door ECU. |
|----------|---|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptom table. (See Pub. RM588E on page DI-616).