

SERVICE HINTS

P16 POWER SEAT CONTROL SW (DRIVER'S SEAT)

1-GROUND : Always approx. 12 volts

4-GROUND : Always continuity

L8 LUMBAR SUPPORT CONTROL SW (DRIVER'S SEAT)

4 (LHD), 1 (RHD)-GROUND : Always approx. 12 volts

3 (LHD), 2 (RHD)-GROUND : Always continuity



: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J23	80 (LHD)	P20	80 (LHD)	P23	80 (LHD)
J47	94 (RHD)		94 (RHD)		94 (RHD)
L8	80 (LHD)	P21	80 (LHD)	P24	80 (LHD)
	94 (RHD)		94 (RHD)		94 (RHD)
P16	80 (LHD)	P22	80 (LHD)		
	94 (RHD)		94 (RHD)		



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	58 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
	58 (RHD)	Floor No.1 Wire and Driver Side J/B (Right Kick Panel)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC1	104 (LHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BD1	114 (RHD)	Floor No.1 Wire and Front Seat RH Wire (Under the Driver's Seat)



: GROUND POINTS

Code	See Page	Ground Points Location
BJ	102 (LHD)	Rear Floor Partition Panel LH
BL	112 (RHD)	Rear Floor Partition Panel RH

J23




(Hint : See Page 7, 23, 39)

J47




(Hint : See Page 7, 23, 39)


L8



P16 BLACK

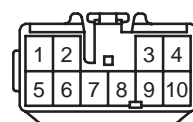

P20 BLUE



P21



P22



P23



P24

