


# VEHICLE LIFT AND SUPPORT LOCATIONS

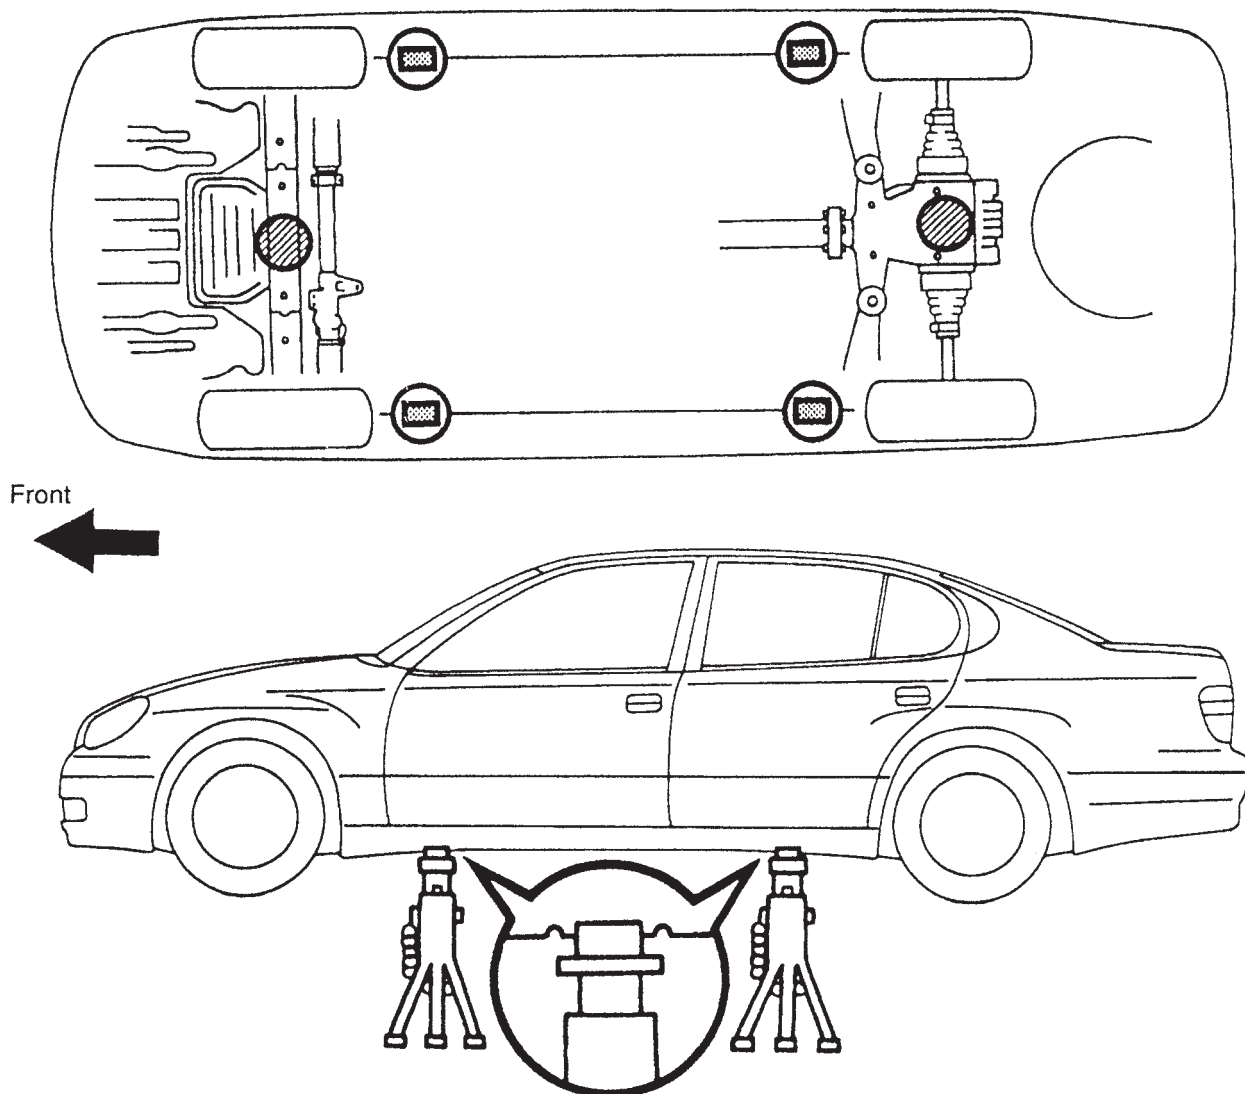

## JACK POSITION

Front - - - - - Front crossmember

Rear - - - - - Differential carrier

**CAUTION :** When jacking-up the rear and front, make sure the car is not carrying any extra weight.


## PANTOGRAPH JACK POSITION

## SUPPORT POSITION

Safety stand and swing arm type lift - - - - -



## PLATE TYPE LIFT

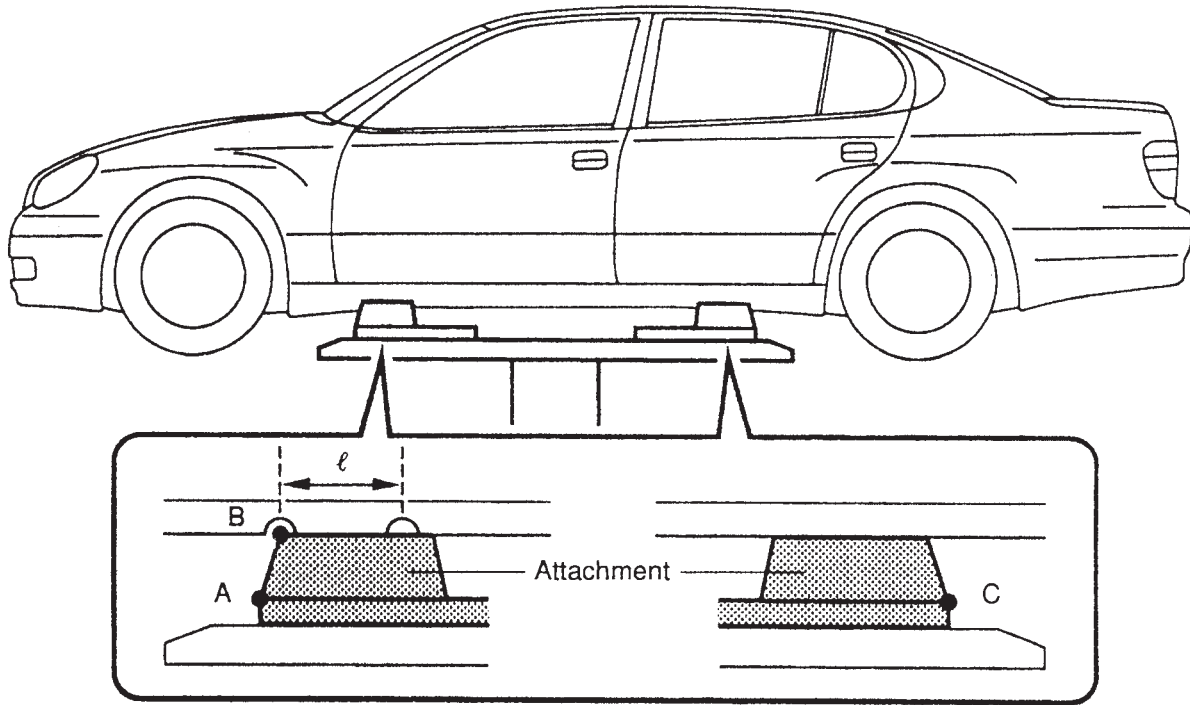**HINT :**

Left and right set position

Front and rear set position

Place the vehicle over the center of the lift.

- Align the cushion gum ends of the plate with the attachment lower ends (A, C).
- Align the attachment upper end (B) with the front jack supporting point ( $\ell$ ).

## Attachment dimensions

