


REMOVAL

1. **G.C.C. Countries:**
REMOVE NO.2 ENGINE UNDER COVER
2. **REMOVE STARTER**
 - (a) Remove the cap and nut, and disconnect the starter wire.
 - (b) Disconnect the starter connector.

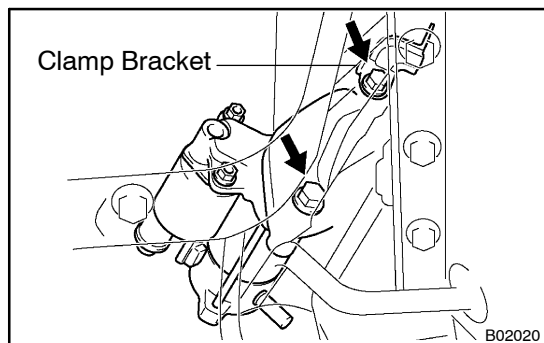

- (c) Remove the 2 bolts and starter.
Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)

HINT:

At time of the installation, place refer to the following item. When installing the upper bolt, tighten it together with the clamp bracket.