



# HEATER RADIATOR REMOVAL

AC16H-01

1. REMOVE A/C UNIT  
(See page AC-26)

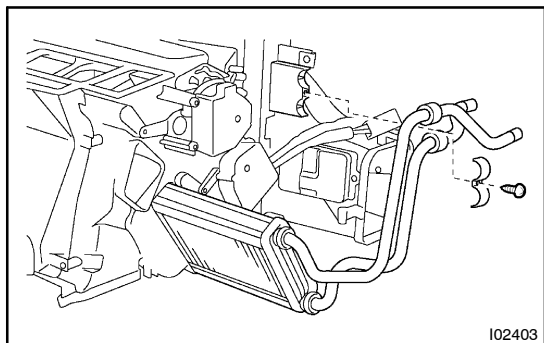

2. **LHD Models:**  
**REMOVE HEATER RADIATOR**
  - (a) Remove the screw and clamp.
  - (b) Pull out the heater radiator.

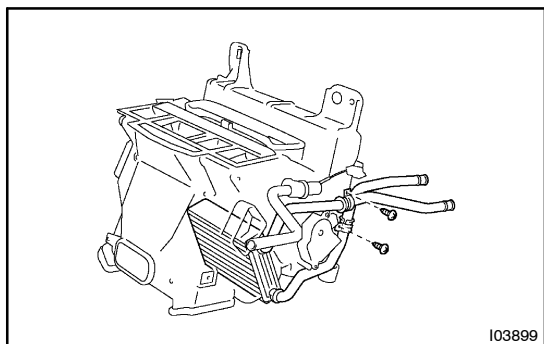

3. **RHD Models:**  
**REMOVE HEATER RADIATOR**
  - (a) Remove the 2 screws and 2 clamps.
  - (b) Pull out the heater radiator.