


REMOVAL

1. **REMOVE REAR WHEEL**
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
2. **REMOVE LUGGAGE COMPARTMENT TRIM FRONT COVER** (See page BO-28)
3. **REMOVE REAR SUSPENSION ARM COVER**
Remove the 2 bolts, nuts and rear suspension arm cover.
4. **REMOVE NO.2 LOWER SUSPENSION ARM** (See page SA-98)

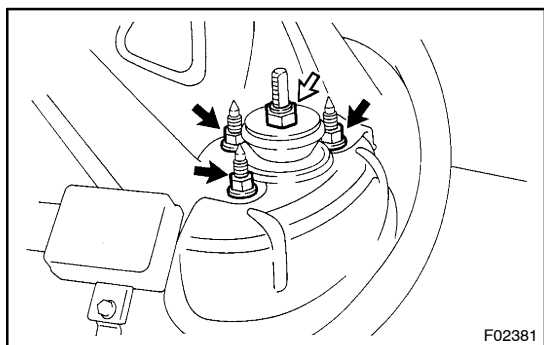

5. **REMOVE SHOCK ABSORBER WITH COIL SPRING**
 - (a) Loosen the nut in the center of the suspension support.


NOTICE:

Do not remove it.

Torque: 27 N·m (280 kgf·cm, 20 ft·lbf)

- (b) Remove the 3 nuts.

Torque: 64 N·m (650 kgf·cm, 47 ft·lbf)

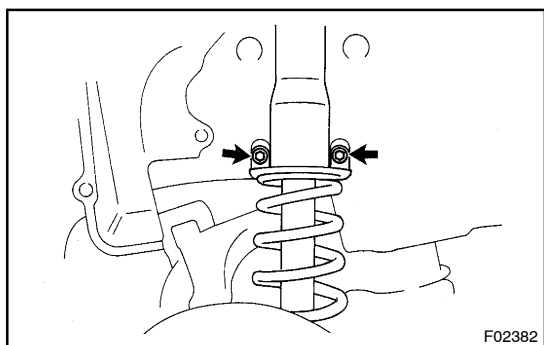

- (c) Remove the 2 bolts and shock absorber with the coil spring.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)