


REPLACEMENT

1. REMOVE ENGINE UNDER COVER

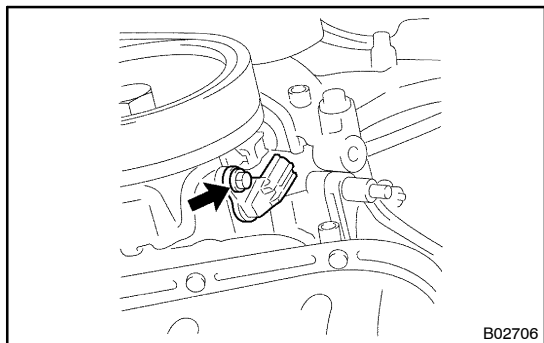

B02706

2. REMOVE CRANKSHAFT POSITION SENSOR

- (a) Disconnect the crankshaft position sensor connector.
- (b) Remove the bolt and crankshaft position sensor

3. REINSTALL NEW CRANKSHAFT POSITION SENSOR

- (a) Install a new crankshaft position sensor with the bolt.

Torque: 6.5 N·m (65 kgf·cm, 58 in.·lbf)

- (b) Connect the crankshaft position sensor connector.

4. REINSTALL ENGINE UNDER COVER