


Connector Joining Wire Harness and Wire Harness

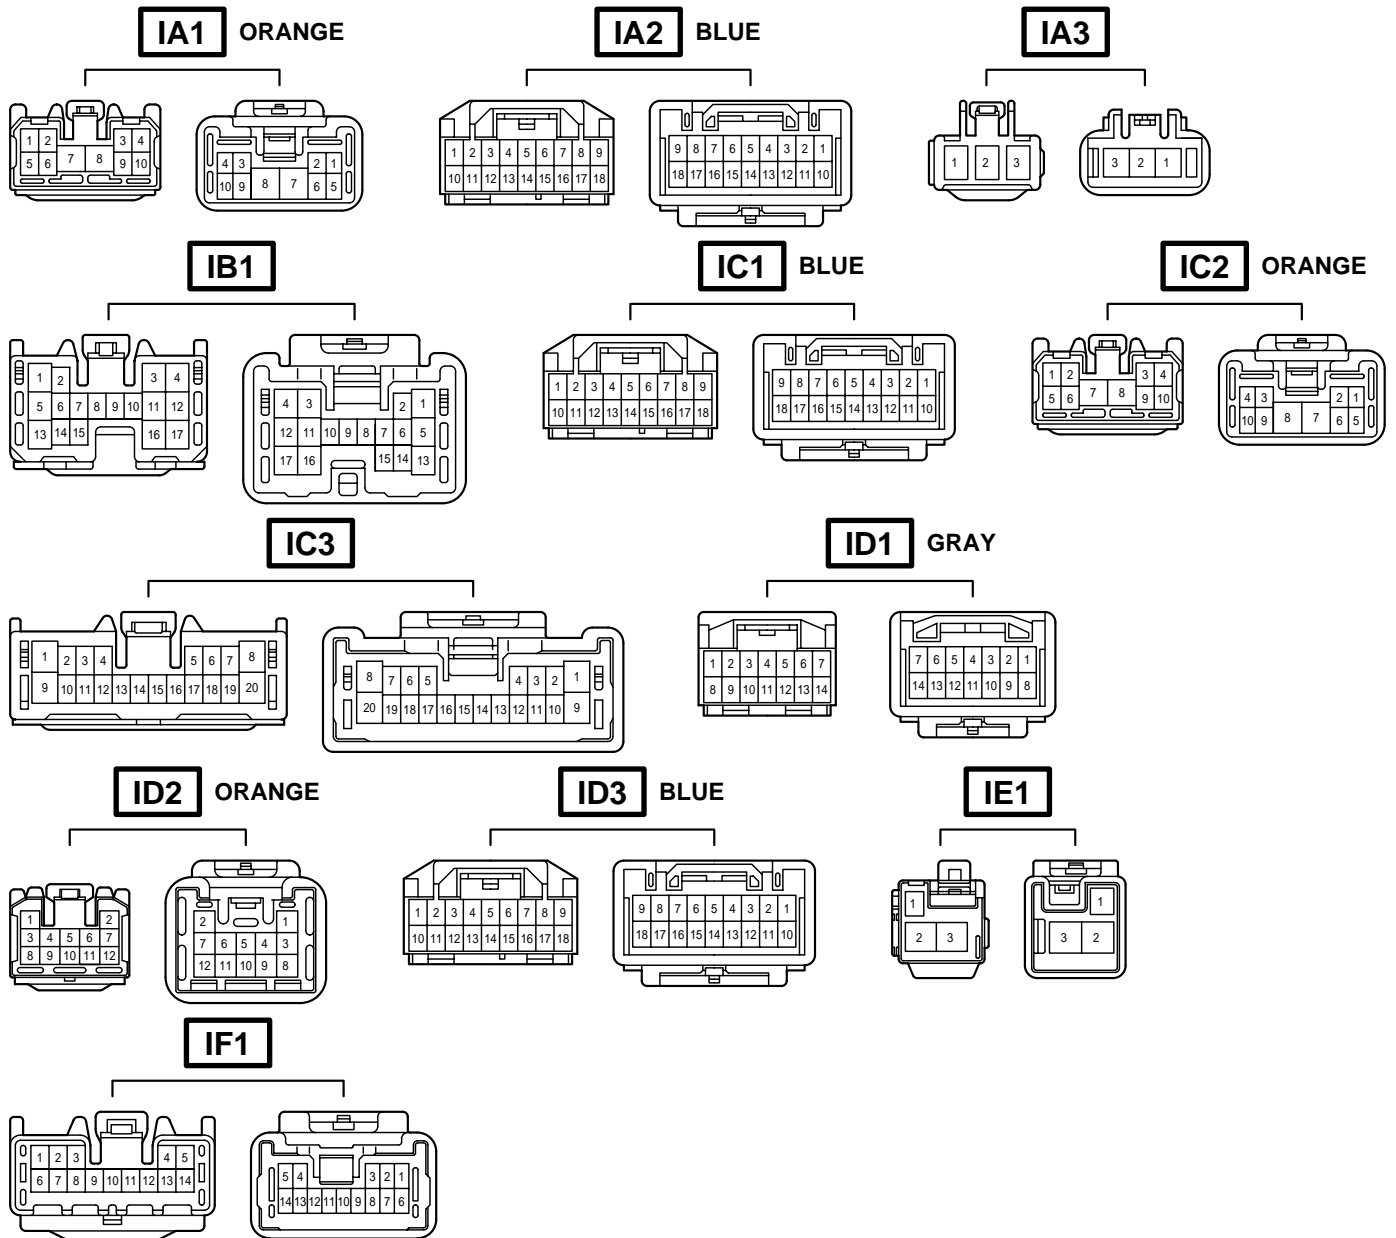

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IA2	
IA3	
IB1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC1	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IC2	
IC3	
ID1	Instrument Panel Wire and Cowl Wire (Right Side of the Blower Unit)
ID2	
ID3	
IE1	Cowl Wire and A/C Sub No.1 Wire (Right Side of the Blower Unit)
IF1	Instrument Panel Wire and A/C Sub No.2 Wire (Right Side of the Blower Unit)