

SERVICE HINTS

P17 POWER SEAT CONTROL SW (FRONT PASSENGER'S SEAT)

1-GROUND : Always approx. 12 volts

4-GROUND : Always continuity

L9 LUMBAR SUPPORT CONTROL SW (FRONT PASSENGER'S SEAT)

1 (LHD), 4 (RHD)-GROUND : Always approx. 12 volts

2 (LHD), 3 (RHD)-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J24	A	80 (LHD)	P25	80 (LHD)	P28
J46	B	94 (RHD)		94 (RHD)	
L9		80 (LHD)	P26	80 (LHD)	P29
		94 (RHD)		94 (RHD)	
P17		80 (LHD)	P27	80 (LHD)	
		94 (RHD)		94 (RHD)	

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2E	60 (LHD)	Floor No.1 Wire and Passenger Side J/B (Right Kick Panel)
	60 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC1	114 (RHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Front Passenger's Seat)
BD1	104 (LHD)	Floor No.1 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

: GROUND POINTS

Code	See Page	Ground Points Location
BJ	112 (RHD)	Rear Floor Partition Panel LH
BL	102 (LHD)	Rear Floor Partition Panel RH

J24 (A)




(Hint : See Page 7, 23, 39)

J46 (B)




(Hint : See Page 7, 23, 39)


L9



P17 BLACK

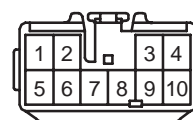


P25 BLUE



P26



P27



P28



P29

