


## Horn circuit

## CIRCUIT DESCRIPTION

The horn is connected to the body No.1 ECU and activated by the body No.1 ECU during warning of the theft deterrent system.

## WIRING DIAGRAM

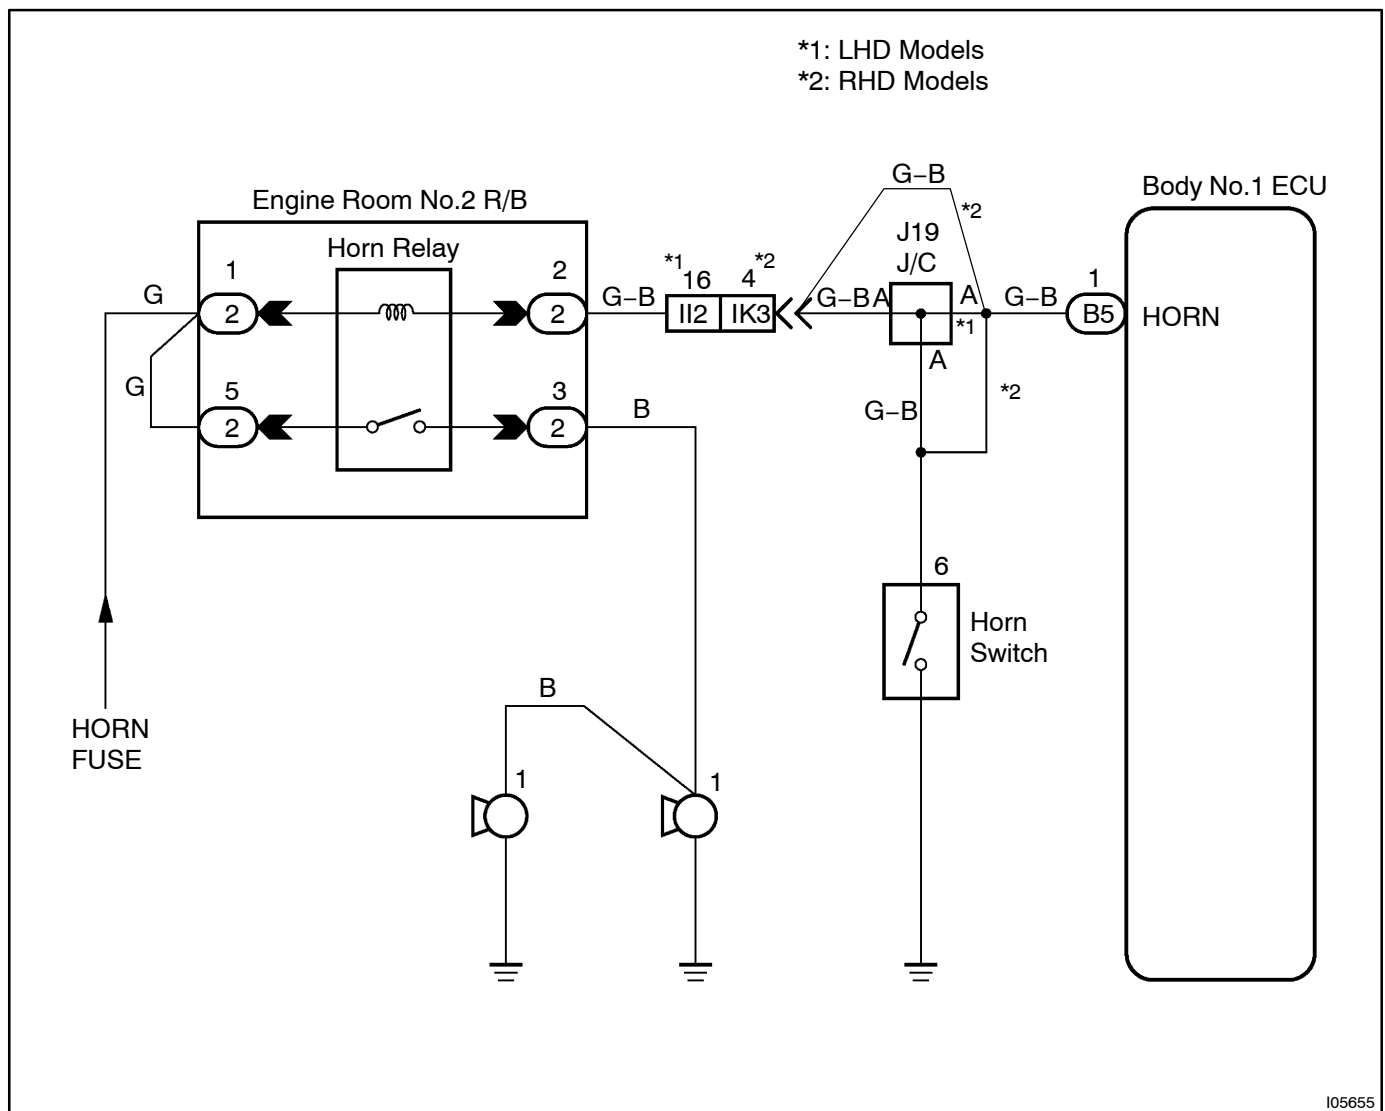

INSPECTION PROCEDURE

1

Check horn. (See page BE-255)

NG

Replace the horn.

OK

2

Check wireharness and connector between horn relay and body ECU, battery and horn relay.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)