


## REMOVAL

### NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in ON or ACC position, DTCs will be recorded.
- Never use airbag parts from another vehicle. When replacing parts, replace with new parts.

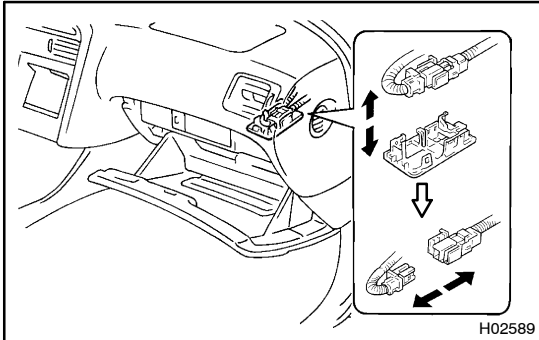

### 1. DISCONNECT AIRBAG CONNECTOR

- Using a screwdriver, remove the glove compartment door finish plate.


### HINT:

Tape the screwdriver tip before use.

- Remove the airbag connector from the plate.
- Disconnect the airbag connector.


### 2. REMOVE INSTRUMENT PANEL

(See page BO-91)

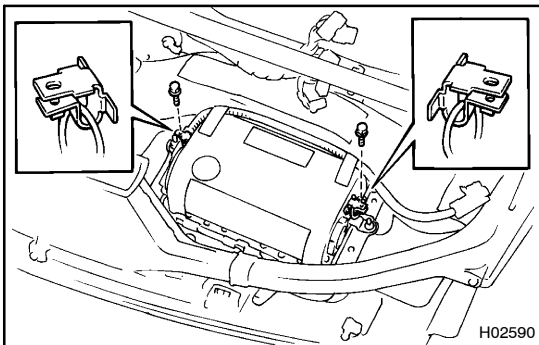

### 3. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- Remove the 2 bolts and 2 straps.

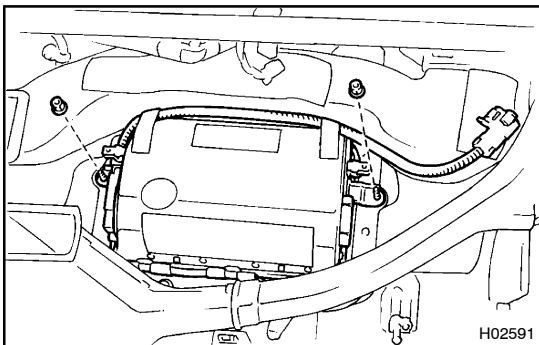

- Remove the 2 nuts and front passenger airbag assembly.

### CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing down.
- Never disassemble the front passenger airbag assembly.