

Bulb Circuit

INSPECTION PROCEDURE

HINT:  
If there is not the LEXUS hand-held tester, begin with STEP 2.

1 Perform active test.

- PREPARATION:**
- (a) Connect the LEXUS hand-held tester to the DLC3.
  - (b) Turn ignition switch ON and LEXUS hand-held tester main switch ON.
  - (c) Select the ACTIVE TEST mode on the LEXUS hand-held tester.

**CHECK:**  
Check that light turns ON or OFF as the LEXUS hand-held tester directs.  
HINT:

All lights flush except shift indicator.


**OK:**  
The light operates normally.

OK

Proceed to next circuit inspection shown in problem symptoms table (See page DI-584).

NG

2 Check bulb.

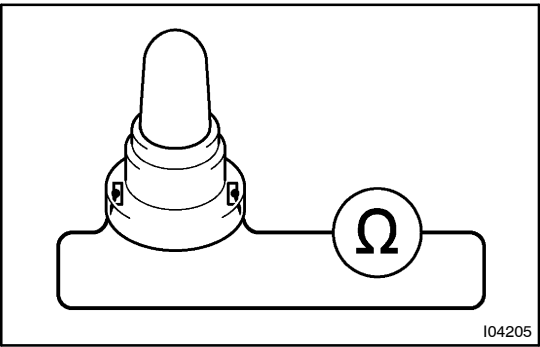

**CHECK:**  
Apply the tester as shown to test for continuity.  
**OK:**  
Continuity

NG

Replace bulb.

OK

3	Check circuit plate. (See page BE-105)
---	--

NG	Replace circuit plate.
----	------------------------

OK

Check and replace combination meter (See page BE-91).