

HEADLIGHT AND TAILLIGHT SYSTEM

LOCATION

BE0MR-01

D.R.L.: Daytime Running Light


LHD Models

Engine Room No.1 Junction Block

- H-LP L LWR Fuse
- H-LP R LWR Fuse
- H-LP L UPR Fuse (w/o D.R.L System)
- H-LP R UPR Fuse (w/o D.R.L System)
- Headlight Control Relay

Engine Room No.2 Junction Block

- Headlight Dimmer (D.R.L. No.2) Relay
- H-LP R UPR Fuse (w/ D.R.L System)
- H-LP L UPR Fuse (w/ D.R.L System)

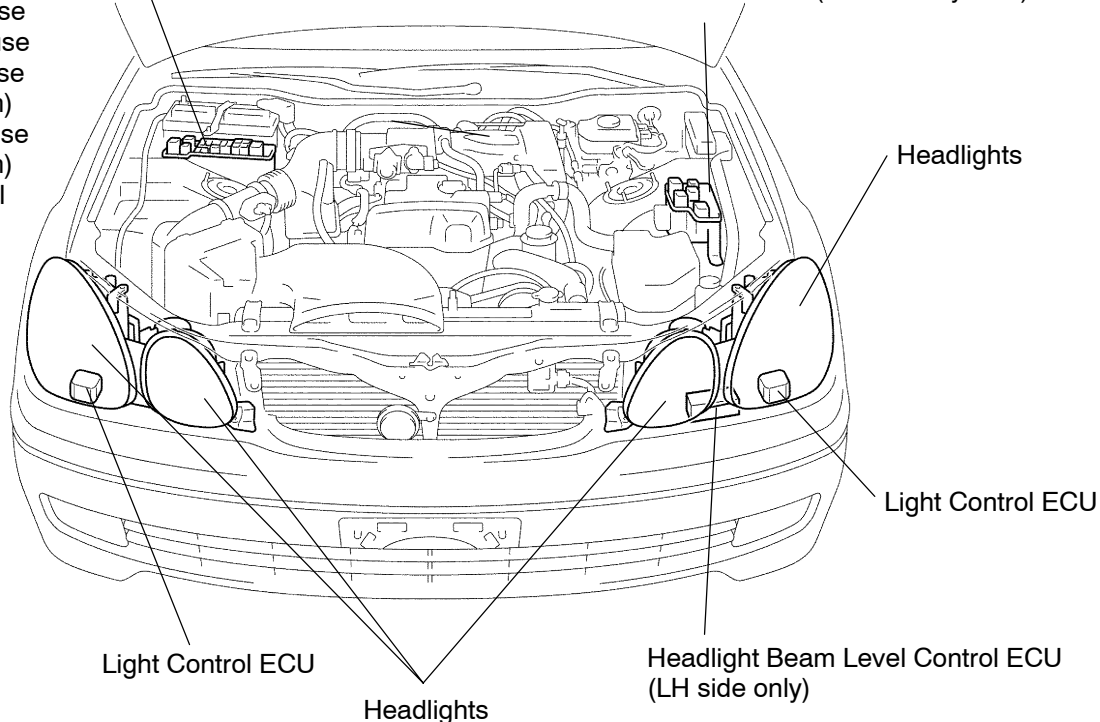

Engine Room No.1 Junction Block

- H-LP L LWR Fuse
- H-LP R LWR Fuse
- H-LP L UPR Fuse (w/o D.R.L System)
- H-LP R UPR Fuse (w/o D.R.L System)
- Headlight Control Relay

RHD Models

Engine Room No.2 Junction Block

- Headlight Dimmer (D.R.L. No.2) Relay
- H-LP R UPR Fuse (w/ D.R.L System)
- H-LP L UPR Fuse (w/ D.R.L System)

