


Connector Joining Wire Harness and Wire Harness

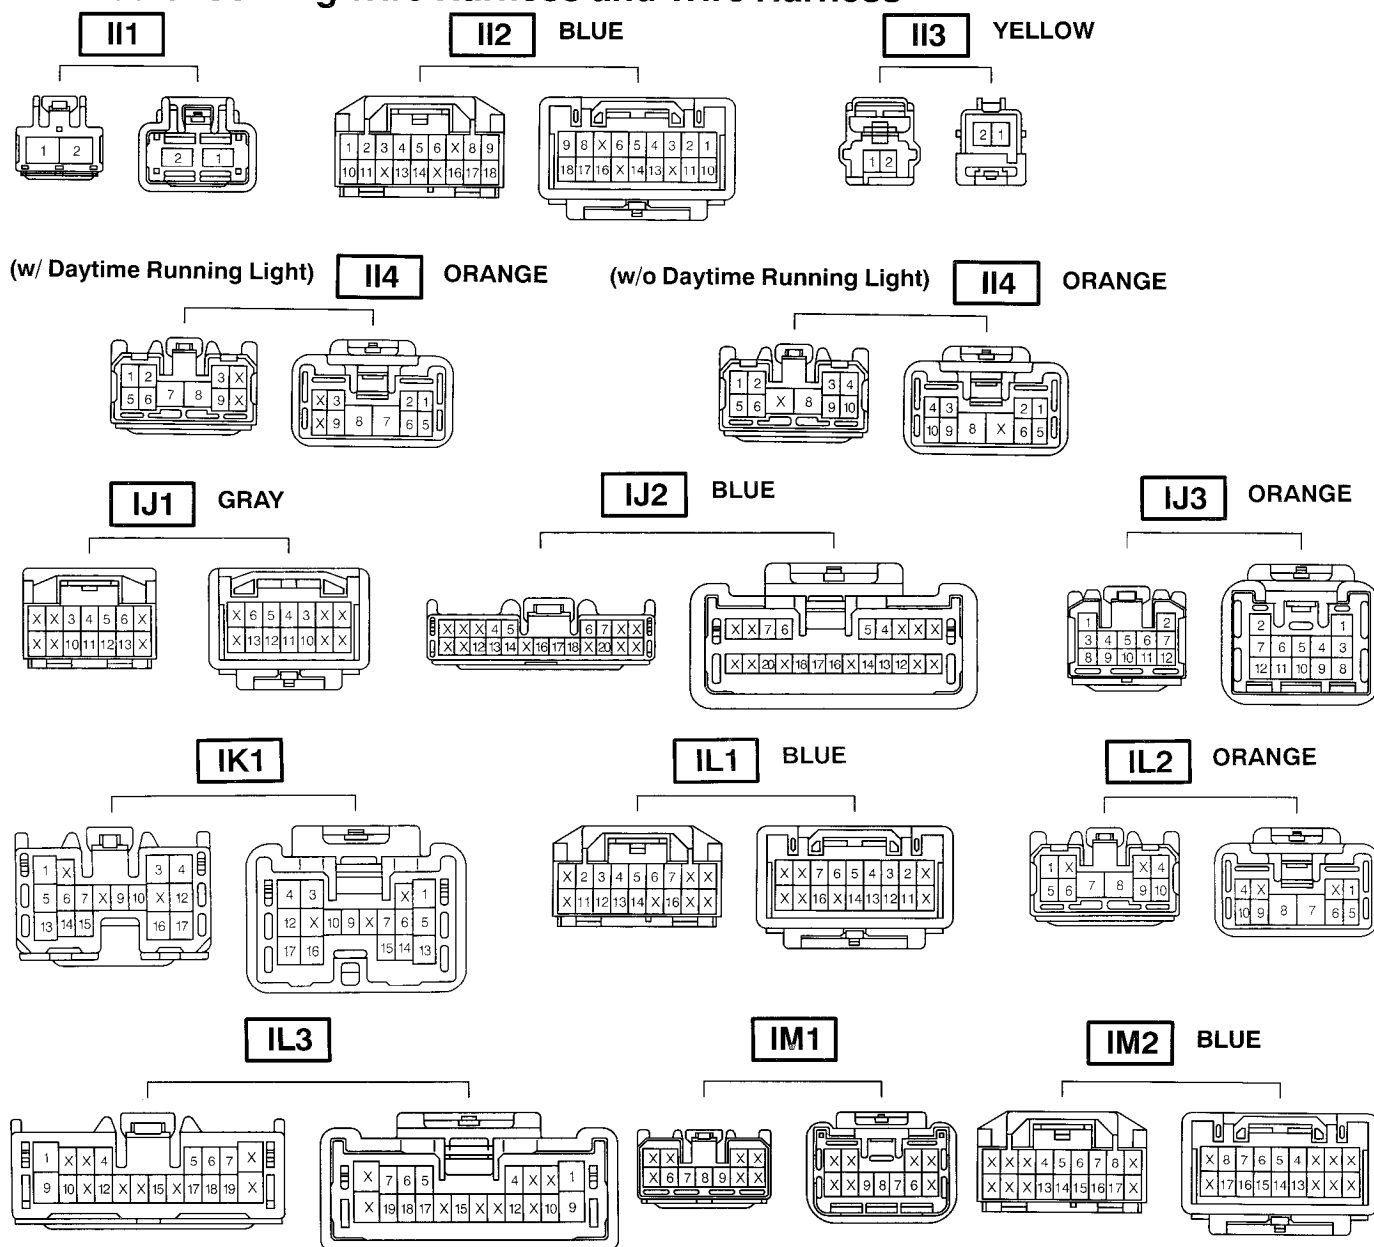

Code	Joining Wire Harness and Wire Harness (Connector Location)
II1	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
II2	
II3	
II4	
IJ1	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)
IJ2	
IJ3	
IK1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL1	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IL2	
IL3	
IM1	Instrument Panel Wire and Floor No.1 Wire (Front RH Side of the Shift Lever)
IM2	