


Double lock motor circuit (Europe)

WIRING DIAGRAM

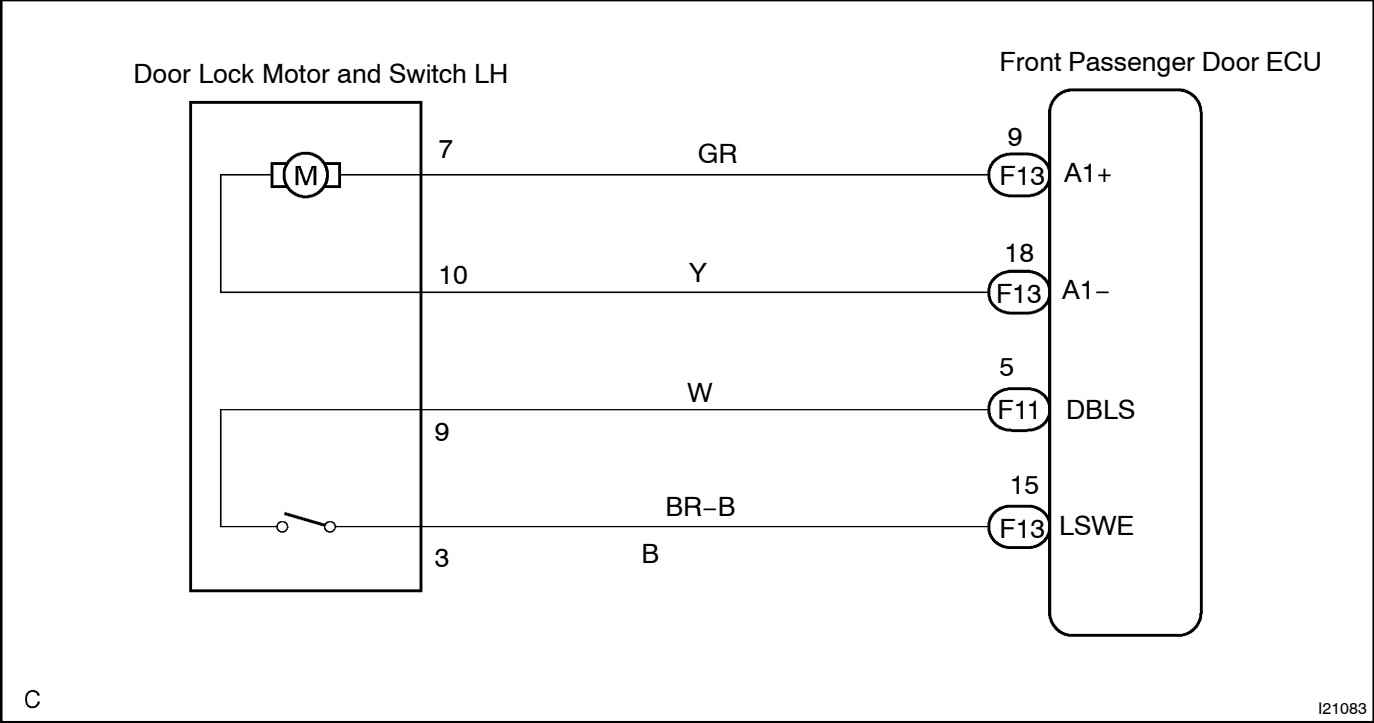

**INSPECTION PROCEDURE**

1 Check double lock motor (See page BE-18).

NG

Replace the double lock motor.

OK

2 Check wireharness and connector between double lock motor and front passenger door ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-604).