


Rear fog light relay circuit (Europe)

WIRING DIAGRAM

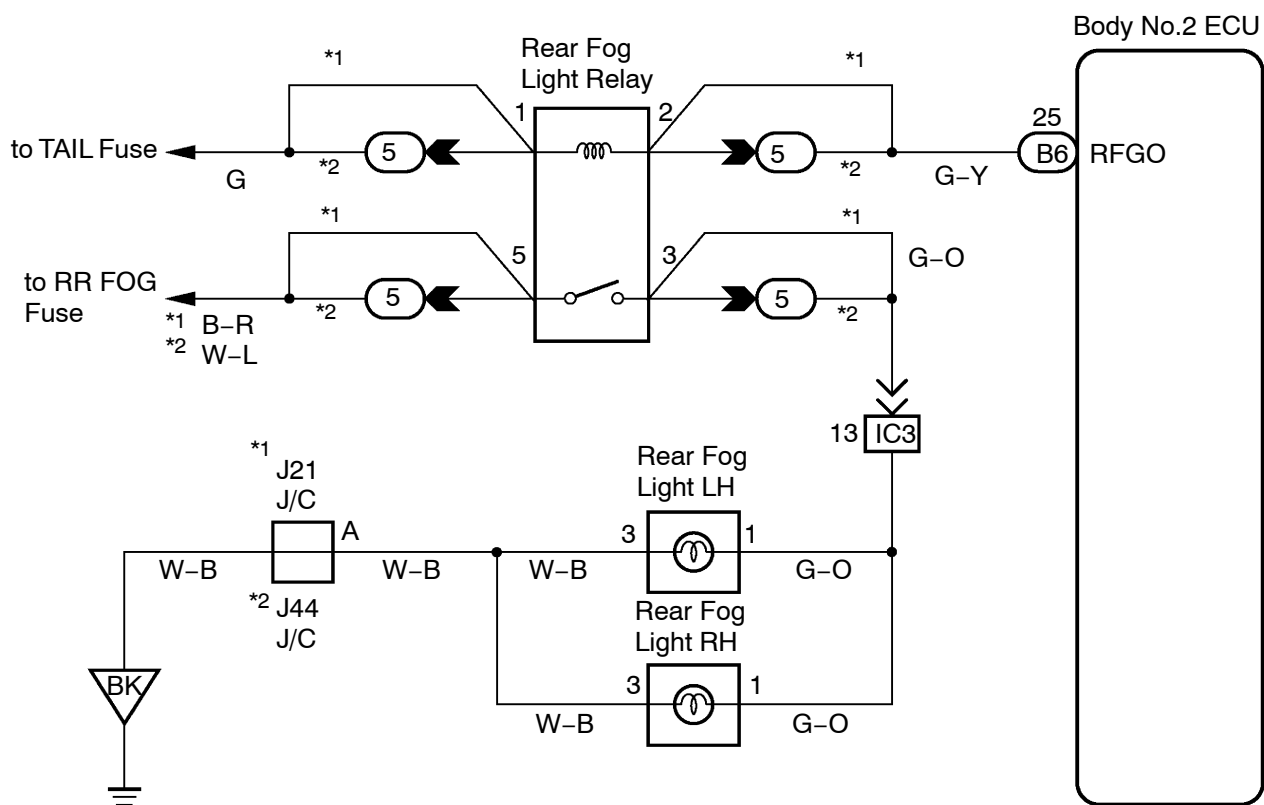

105625

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1 Check rear fog light relay using hand-held tester.

PREPARATION:

Connect the hand-held tester to the DLC3.

CHECK:

Check that the rear fog light relay can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-660)

NG

2 Check rear fog light relay. (See page BE-38)

NG

Replace the rear fog light relay.

OK

3 Check wire harness and connector between rear fog light relay and Body ECU, battery and rear fog light relay.

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI-660)