

SERVICE HINTS

H1, H2 HEADLIGHT BEAM LEVEL CONTROL ACTUATOR

6-GROUND : Approx. 12 volts with dimmer SW at **FLASH** position

5-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
H1	68 (LHD)	H21	86 (RHD)	J29	84 (RHD)
	82 (RHD)	J8	74 (LHD)	J32	88 (RHD)
H2	68 (LHD)	J10	74 (LHD)	J33	B
	82 (RHD)	J11	A	J37	88 (RHD)
H21	72 (LHD)	J14	74 (LHD)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	54 (LHD)	Engine Room No.1 R/B (Engine Compartment Right)
	54 (RHD)	Engine Room No.1 R/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	98 (LHD)	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
	108 (RHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
II2	100 (LHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IK3	110 (RHD)	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	96 (LHD)	Right Fender
EB	96 (LHD)	Left Fender
	106 (RHD)	
EE	106 (RHD)	Under the ABS & TRC & VSC Actuator
IF	98 (LHD)	Left Kick Panel
	108 (RHD)	


H1 GRAY




H2 GRAY



H21 GRAY




J8

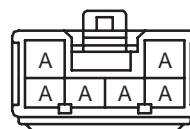

(Hint : See Page 7, 23, 39)

J10 GRANGE

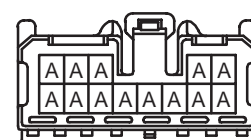


(Hint : See Page 7, 23, 39)

J11 (A) BLACK



(Hint : See Page 7, 23, 39)

J14 GRAY

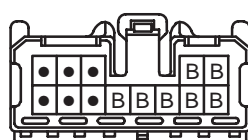


(Hint : See Page 7, 23, 39)

J29 BLUE



(Hint : See Page 7, 23, 39)

J32

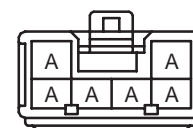

(Hint : See Page 7, 23, 39)

J33 (B) BLACK



(Hint : See Page 7, 23, 39)

J37



(Hint : See Page 7, 23, 39)