


Double lock motor circuit (Europe)

WIRING DIAGRAM

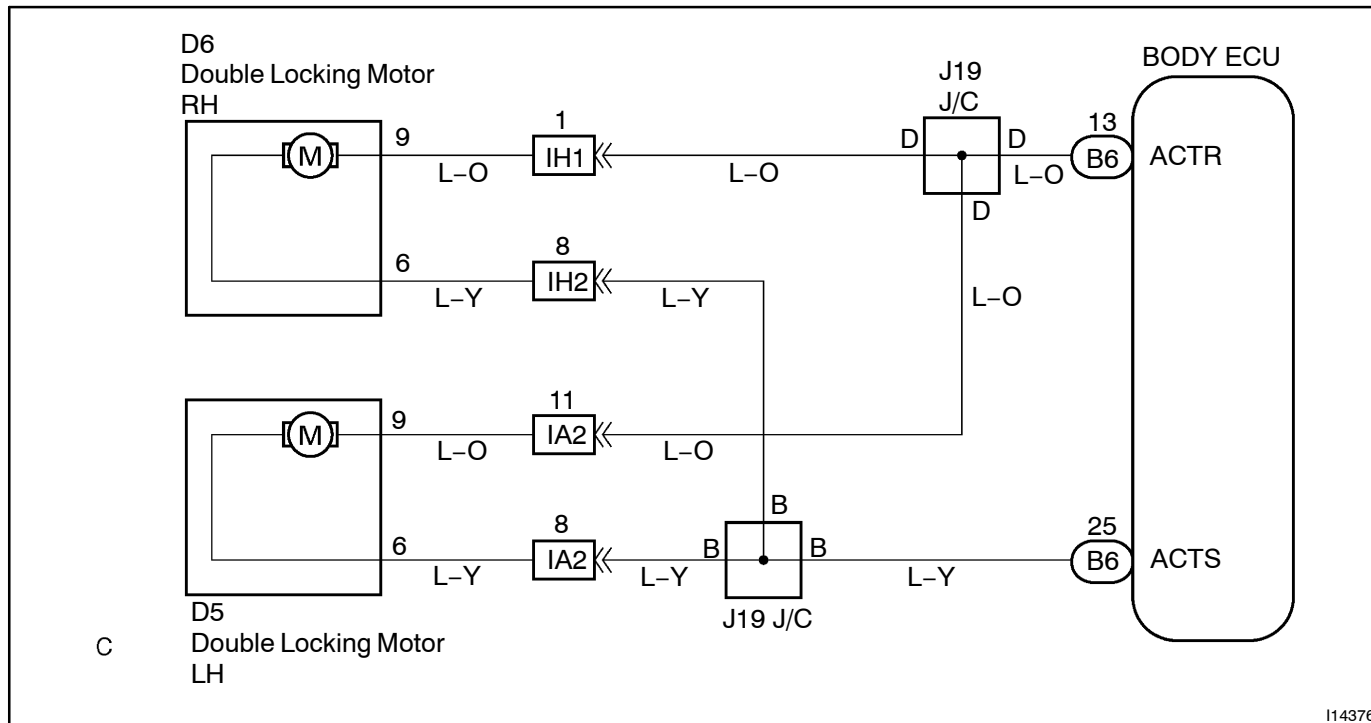

INSPECTION PROCEDURE

1 Check double lock motor (See page BE-18).

NG

Replace the double lock motor.

OK

2 Check wireharness and connector between double lock motor and rear left door ECU (See page IN-30).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-697).