


## Luggage opener switch circuit

### WIRING DIAGRAM

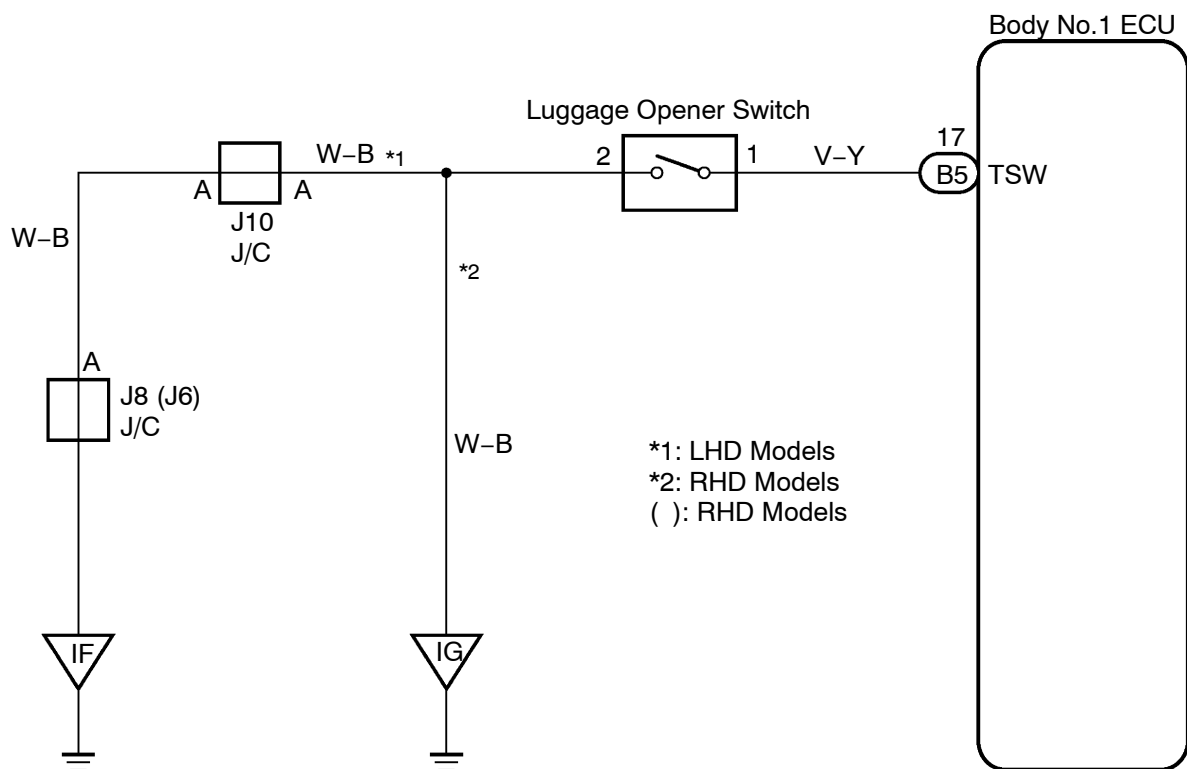

I05660

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

**1** Check wiper control switch using LEXUS hand-held tester.

### PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

### CHECK:

Check the luggage opener switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)

NG

**2** Check luggage opener switch and main switch. (See page BE-148)

NG

Replace the luggage opener switch and main switch.

OK

**3** Check wireharness and connector between luggage opener switch and body No.1 ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)