
























Position of Parts in Engine Compartment

* 5: From Dec. 2018 Production
* 8: Before Dec. 2018 Production

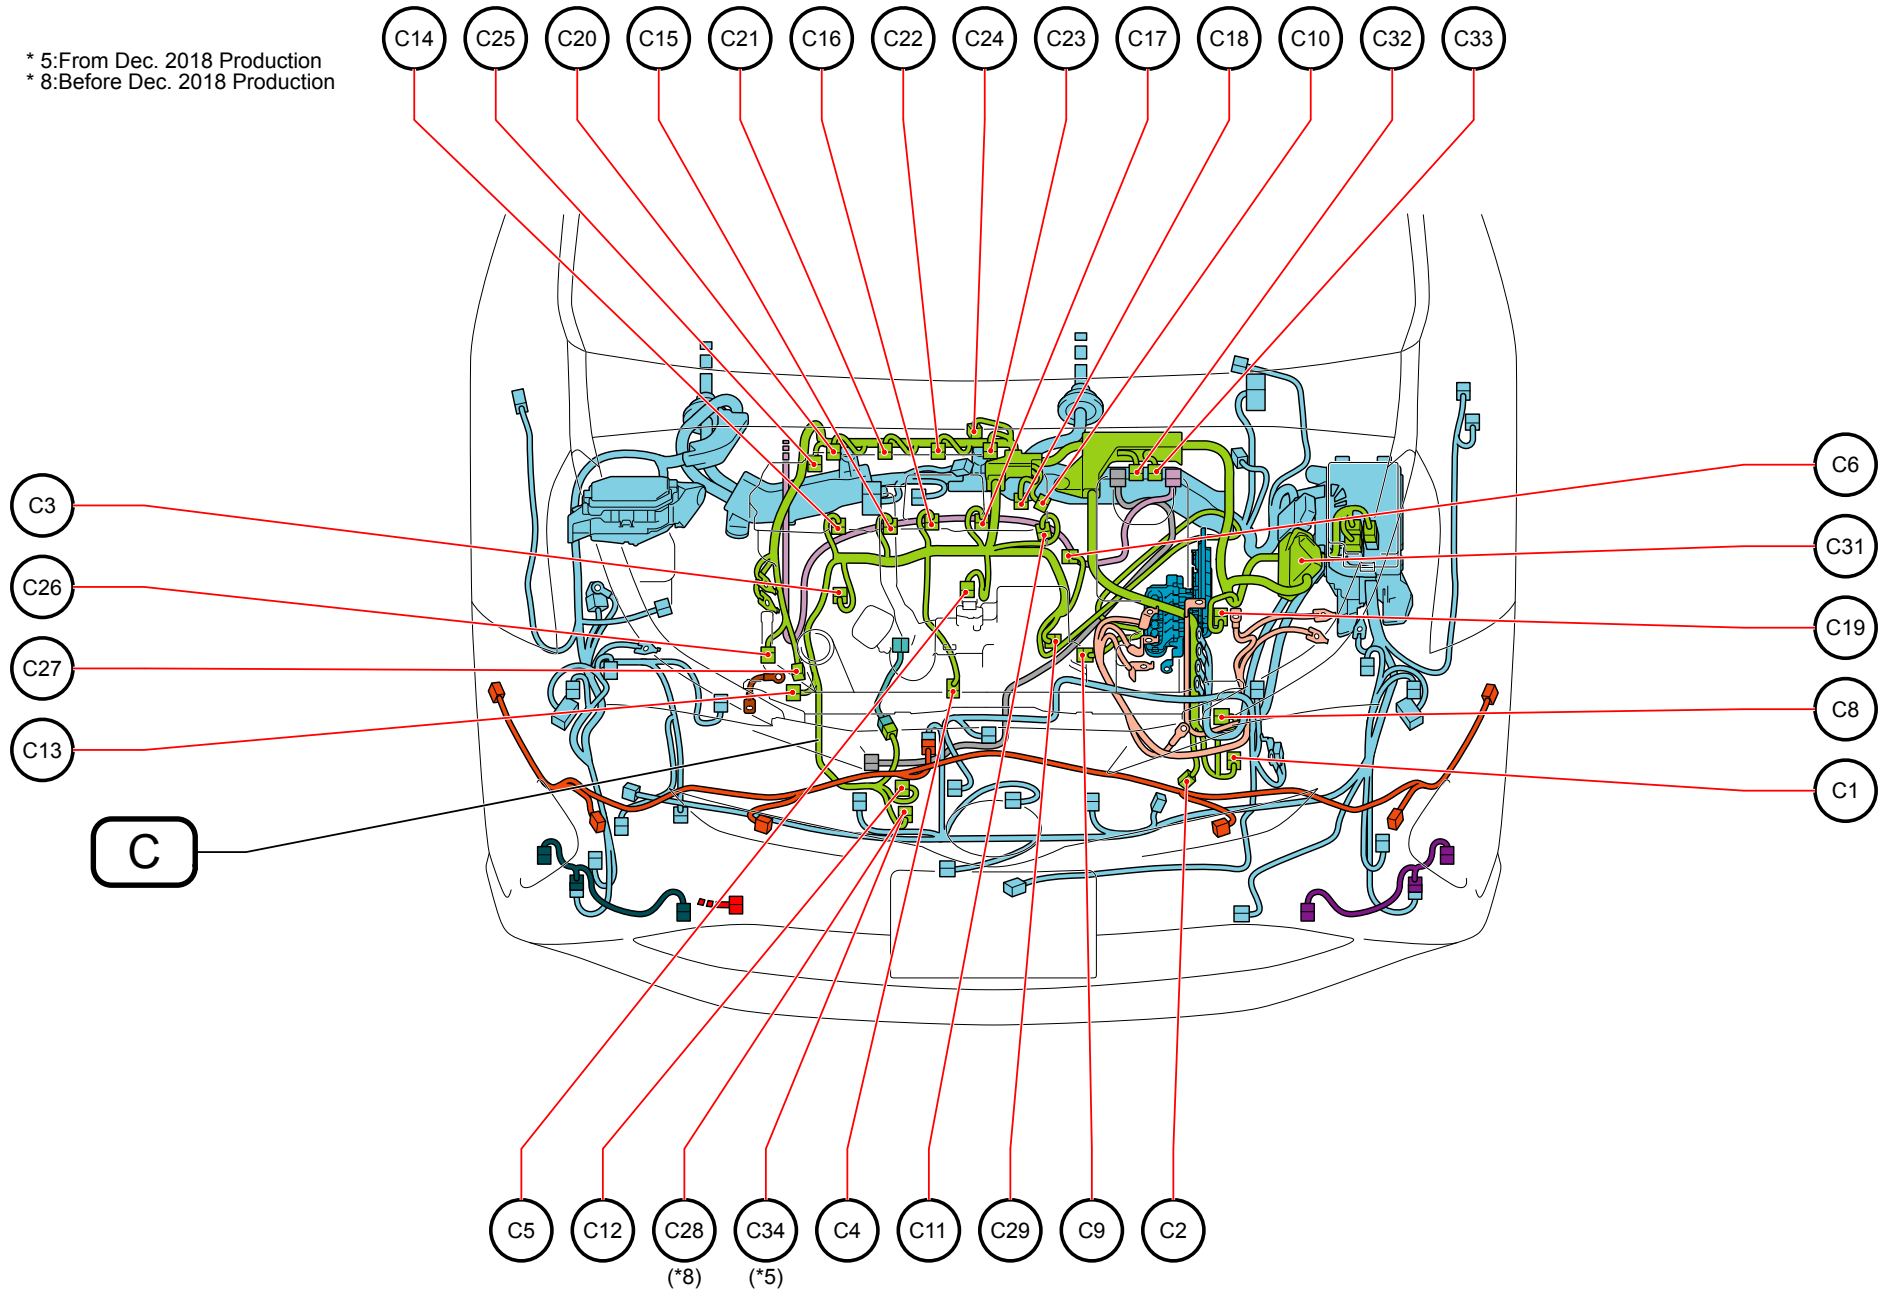

C1	Hybrid Vehicle Transaxle Assembly
C2	Shift Control Actuator Assembly
C3	E.F.I. Vacuum Sensor Assembly
C4	Throttle Body Assembly
C5	Intake Mass Air Flow Meter Sub-Assembly
C6	E.F.I. Engine Coolant Temperature Sensor
C8	Hybrid Vehicle Transaxle Assembly
C9	Oxygen Sensor (Bank 1 Sensor 2)
C10	EGR Valve Assembly
C11	Purge VSV
C12	Compressor with Motor Assembly
C13	Engine Water Pump Assembly
C14	Fuel Injector Assembly No. 1
C15	Fuel Injector Assembly No. 2
C16	Fuel Injector Assembly No. 3
C17	Fuel Injector Assembly No. 4
C18	Cam Position Sensor
C19	Battery State Sensor Assembly
C20	Ignition Coil Assembly No. 1
C21	Ignition Coil Assembly No. 2
C22	Ignition Coil Assembly No. 3
C23	Ignition Coil Assembly No. 4
C24	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C25	Camshaft Timing Oil Control Valve Assembly
C26	Engine Oil Pressure Switch Assembly
C27	Crank Position Sensor
C28	Engine Oil Level Sensor
C29	Engine Coolant Temperature Sensor
C31	ECM
C32	Inverter with Converter Assembly
C33	Inverter with Converter Assembly
C34	Engine Oil Level Sensor

Position of Parts in Engine Compartment

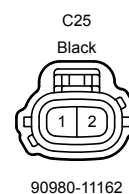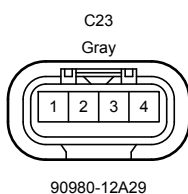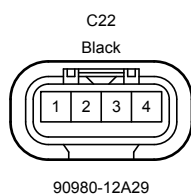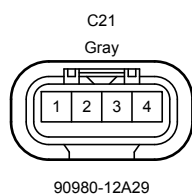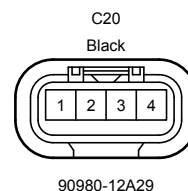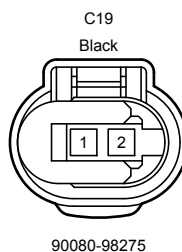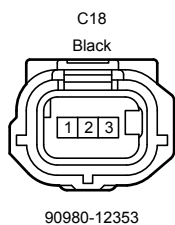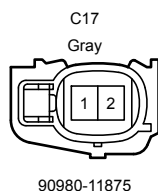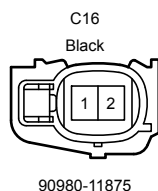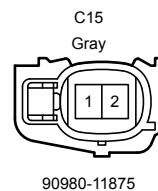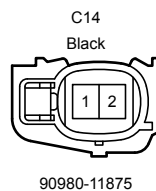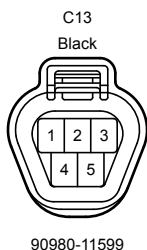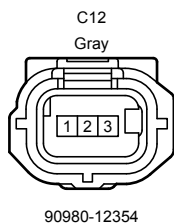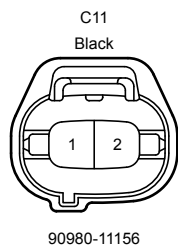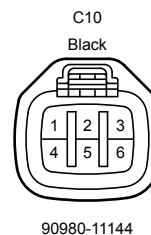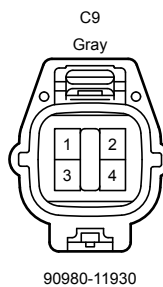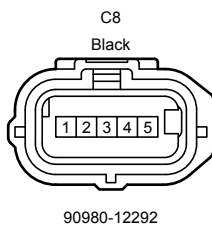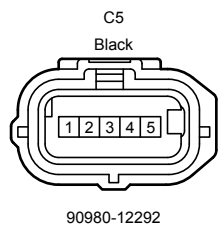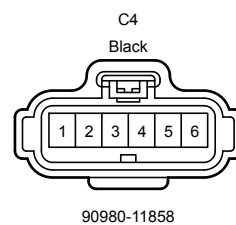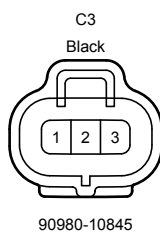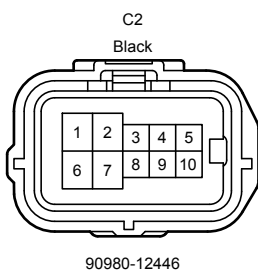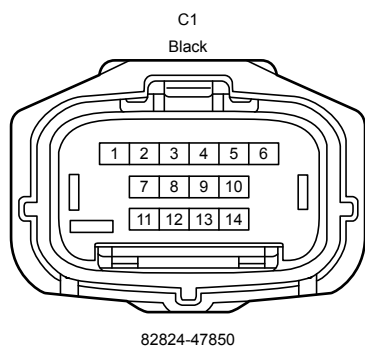

Position of Parts in Engine Compartment

