


LOCATION

Engine Room No.1 Junction Block

- ECU-B1 Fuse
- RAD NO.1 Fuse

LHD Models

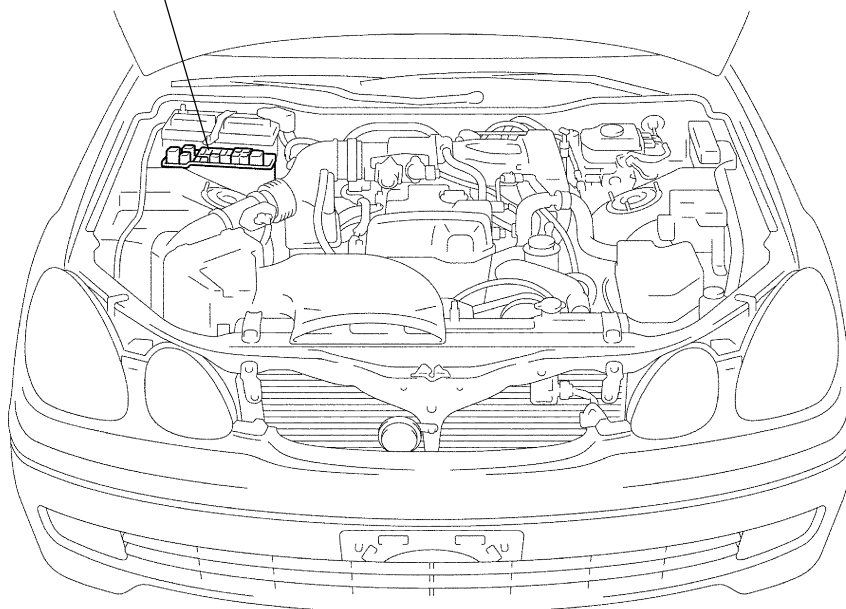

Engine Room No.1 Junction Block

- ECU-B1 Fuse
- RAD NO.1 Fuse

RHD Models

