


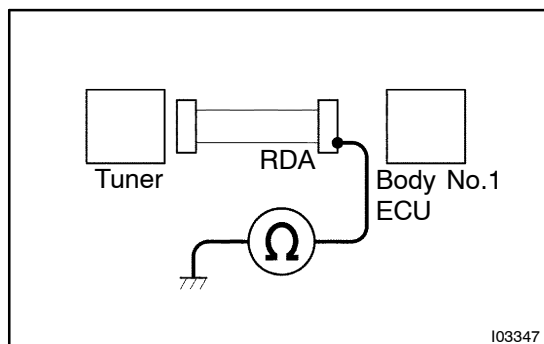

## INSPECTION PROCEDURE

## 1 Check wireharness.

**PREPARATION:**

Disconnect the connector of tuner and body No.1 ECU.

**CHECK:**

Check the continuity between wireharness and body ground.

**OK:**


No continuity.

NG

Repair or replace the wireharness.

OK

## 2 Check body No.1 ECU.

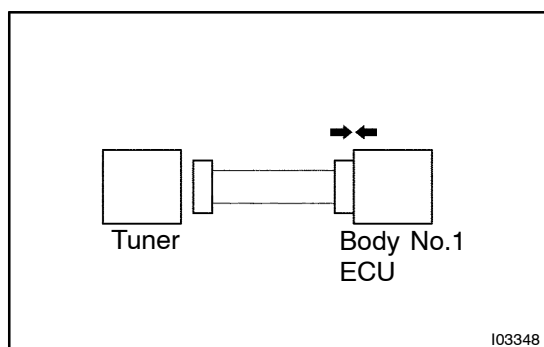**PREPARATION:**

Connect the connector of body No.1 ECU.

**CHECK:**

Check the DTC.

**OK:**

B1242/42 is not output.

NG

Replace the body No.1 ECU.

OK

Replace the tuner.