

OUTER REAR VIEW MIRROR GLASS REMOVAL

CAUTION / NOTICE / HINT

Tech Tips

- Use the same procedure for the RH side and LH side.
- The following procedure is for the LH side.

PROCEDURE

1. REMOVE OUTER MIRROR

- Apply protective tape to the areas shown in the illustration.**
- Push the upper part of the mirror surface and tilt it.**
- Using a moulding remover, disengage the 2 claws on the lower part of the outer mirror as shown in the illustration.**

Note

Do not push the outer mirror with excessive force. Doing so may cause the actuator to come off or break the mirror surface.

- Push the lower part of the mirror surface and tilt it.**

- Using a moulding remover, disengage the 2 claws on the upper part of the outer mirror as shown in the illustration.**

Note


Do not push the outer mirror with excessive force. Doing so may cause the actuator to come off or break the mirror surface.

f. w/o Blind Spot Monitor System:


- Disconnect the connector to remove the outer mirror.**

g. w/ Blind Spot Monitor System:


- Disconnect the connector.**

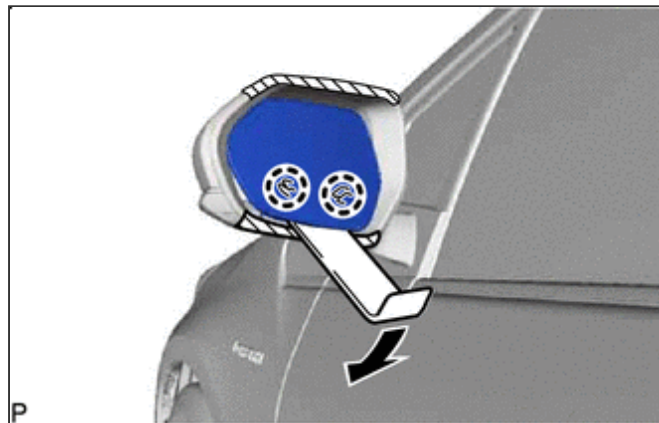


Protective Tape

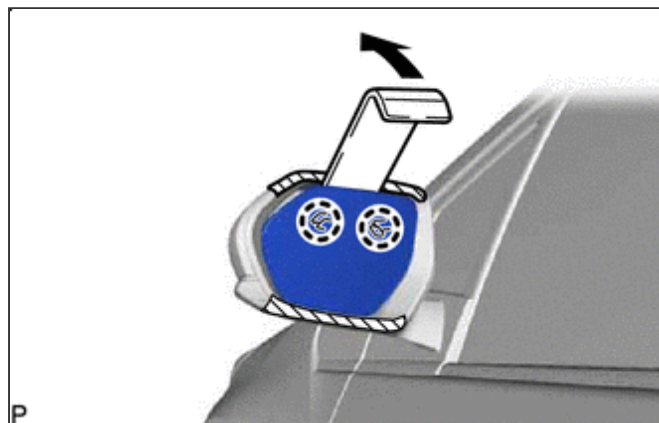

Protective Tape

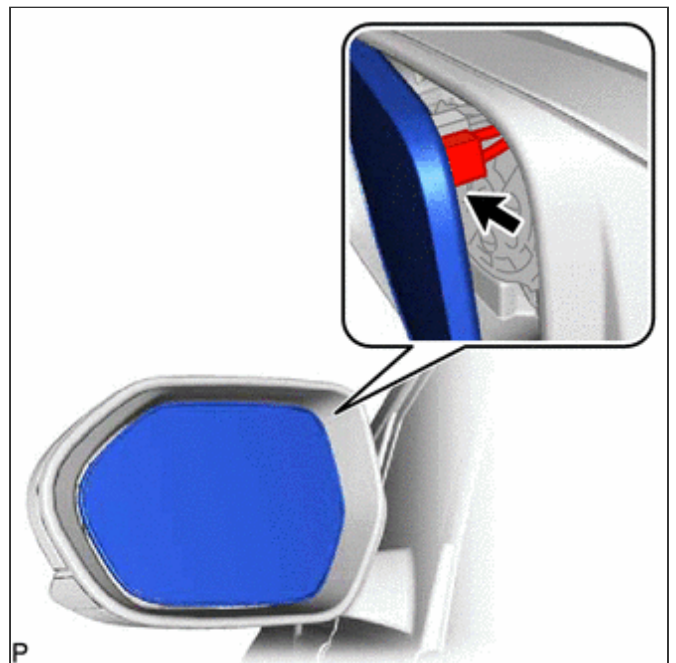

ii. Disengage the claw as shown in the illustration.

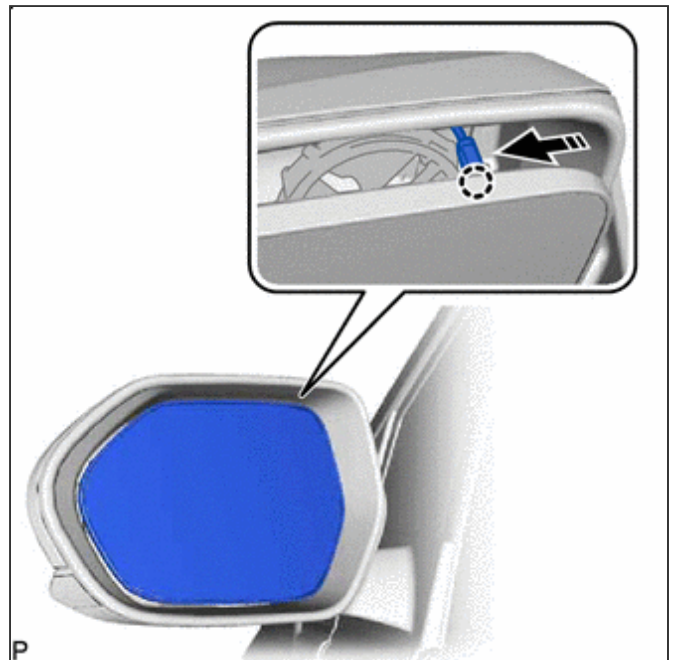

Push in this Direction

iii. Disengage the clamp.

iv. Disconnect the connector to remove the outer mirror.

