


■ AIR CONDITIONER SYSTEM

Automatic Recirculation Control

General

- The automatic recirculation control is used on models for Russia.
- The automatic recirculation control uses a smog ventilation sensor that detects harmful elements such as CO, HC, and NO_x, which are present in the air outside the vehicle, and automatically switches the air inlet modes in accordance with the level of concentration of those elements.
- The construction and operation of this control are the same as those of the automatic recirculation control that is used on the current LS430. For details, refer to the LEXUS LS430 New Car Features (Pub. No. NCF194E).

► System Diagram ◀

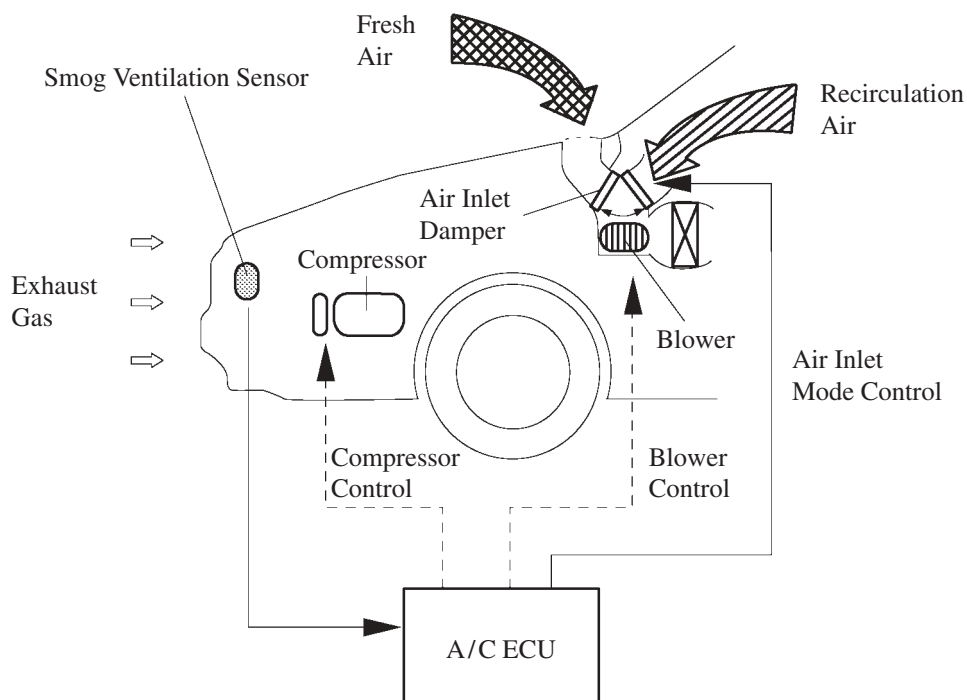

151LBE17