



KICK-DOWN SWITCH ON-VEHICLE REPAIR

1. RHD:
REMOVE FRONT DOOR SCUFF PLATE
(See page BO-12)
2. PULL BACK FLOOR CARPET

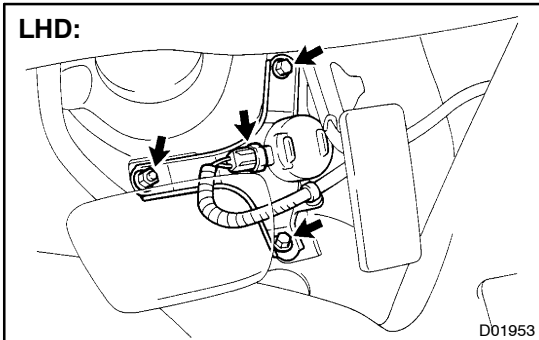

3. REMOVE KICK-DOWN SWITCH
 - (a) Disconnect the kick-down switch connector.
 - (b) Remove the 2 bolts, nut and kick-down switch.
4. INSTALL KICK-DOWN SWITCH
 - (a) Install the 2 bolts, nut and kick-down switch.
 - (b) Connect the kick-down switch connector.

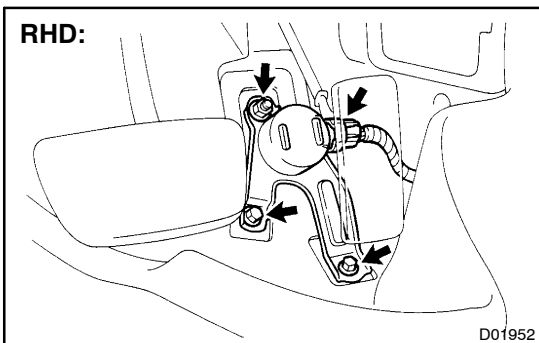

5. RETURN FLOOR CARPET
6. RHD:
INSTALL FRONT DOOR SCUFF PLATE
(See page BO-12)