

SERVICE HINTS

DEFOGGER RELAY

1-2 : Closed with ignition SW at **ON** position and defogger SW on

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A16	72 (LHD)	J10	74 (LHD)	N5	78 (LHD)
	86 (RHD)	J13 A	74 (LHD)		92 (RHD)
B5 A	72 (LHD)	J18	74 (LHD)	R17	78 (LHD)
	86 (RHD)	J31 B	88 (RHD)		92 (RHD)
E5	68 (LHD)	J32	88 (RHD)	R18	78 (LHD)
	82 (RHD)	M2	74 (LHD)		92 (RHD)
J8	74 (LHD)		88 (RHD)		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	54 (LHD)	Engine Room No.1 R/B (Engine Compartment Right)
	54 (RHD)	Engine Room No.1 R/B (Engine Compartment Left)
4	57 (LHD)	Passenger Side R/B (Right Kick Panel)
	57 (RHD)	Passenger Side R/B (Left Kick Panel)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	58 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	58 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)
2A	60 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
	60 (RHD)	Engine Room Main Wire and Passenger Side J/B (Left Kick Panel)
2F	60 (LHD)	Cowl Wire and Passenger Side J/B (Right Kick Panel)
	60 (RHD)	Cowl Wire and Passenger Side J/B (Left Kick Panel)
2G	61 (LHD)	Cowl Wire and Passenger Side J/B (Right Kick Panel)
	61 (RHD)	Cowl Wire and Passenger Side J/B (Left Kick Panel)
2H	61 (LHD)	Cowl Wire and Passenger Side J/B (Right Kick Panel)
	61 (RHD)	Cowl Wire and Passenger Side J/B (Left Kick Panel)
2J	61 (LHD)	Cowl Wire and Passenger Side J/B (Right Kick Panel)
	61 (RHD)	Cowl Wire and Passenger Side J/B (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	98 (LHD)	Front Door LH Wire and Cowl Wire (Left Kick Panel)
	108 (RHD)	
IC2	98 (LHD)	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
	108 (RHD)	
ID1	108 (RHD)	Instrument Panel Wire and Cowl Wire (Right Side of the Blower Unit)
IJ1	100 (LHD)	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)
IK1	100 (LHD)	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL1	110 (RHD)	

REAR WINDOW DEFOGGER AND MIRROR HEATER


: GROUND POINTS

Code	See Page	Ground Points Location
EB	96 (LHD)	Left Fender
	106 (RHD)	
IF	98 (LHD)	Left Kick Panel
	108 (RHD)	
IG	108 (RHD)	Behind the Combination Meter
II	98 (LHD)	Right Side of the Cowl Panel
	108 (RHD)	Cowl Side Panel RH


A16

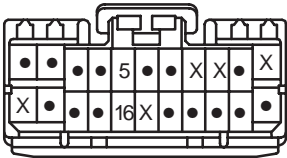


B5 (A)

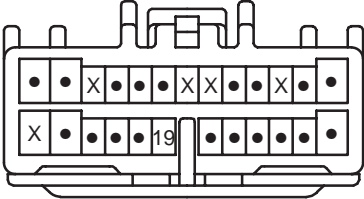

E5

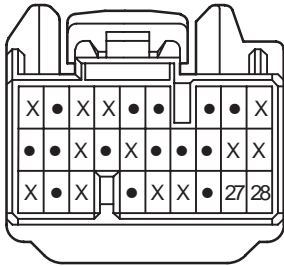


J8

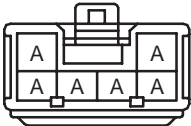


(Hint : See Page 7, 23, 39)

J10 ORANGE

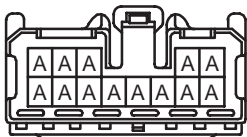

(Hint : See Page 7, 23, 39)

J13 (A)

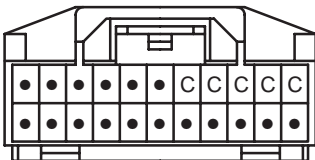


(Hint : See Page 7, 23, 39)

J18




(Hint : See Page 7, 23, 39)

J31 (B)

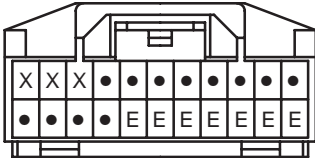


(Hint : See Page 7, 23, 39)

J32

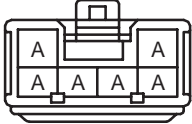

(Hint : See Page 7, 23, 39)


M2 BLUE

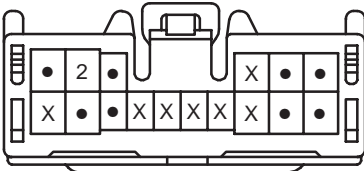

N5



R17

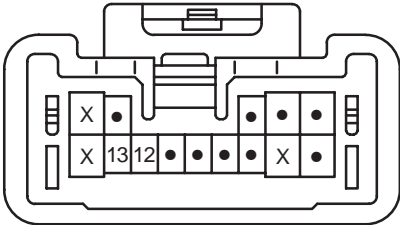

R18

