


## FUEL CUT RPM INSPECTION

### 1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

### 2. CONNECT HAND-HELD TESTER (See page EM-19)

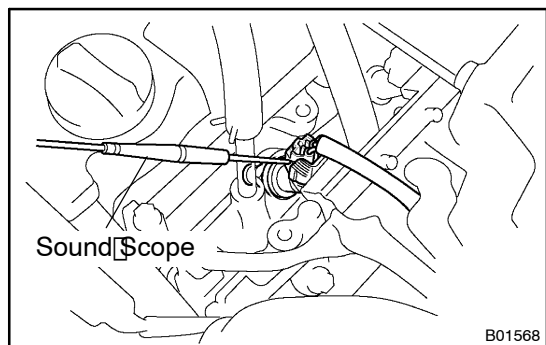

### 3. INSPECT FUEL CUTOFF OPERATION

- (a) Increase the engine speed to at least 3,000 rpm.
- (b) Check for injector operating noise.
- (c) Check that when the throttle lever is released, injector operation noise stops momentarily and then resumes.

HINT:

Measure with the A/C OFF.

**Fuel return rpm: 1,000 rpm**

### 4. DISCONNECT HAND-HELD TESTER