



## INSPECTION

1. DRAIN ENGINE COOLANT
2. REMOVE V-BANK COVER
3. REMOVE INTAKE AIR CONNECTOR PIPE
4. REMOVE THROTTLE BODY (See page FI-38)

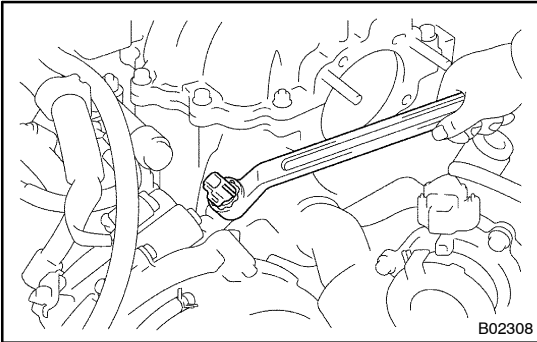

5. REMOVE WATER TEMPERATURE SENSOR
  - (a) Disconnect the water temperature sensor.
  - (b) Remove the water temperature sensor and gasket.

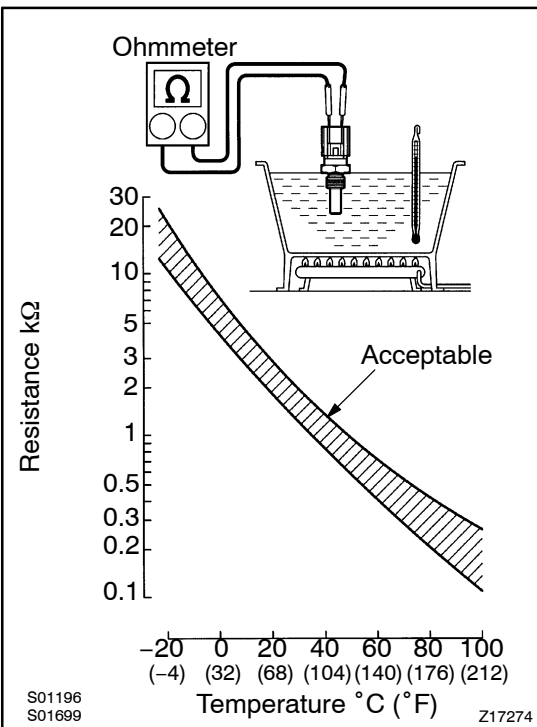

## 6. INSPECT WATER TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.

**Resistance: Refer to the graph**

If the resistance is not as specified, replace the water temperature sensor.

## 7. REINSTALL WATER TEMPERATURE SENSOR

- (a) Install a new gasket and the water temperature sensor.

**Torque: 19.6 N·m (200 kgf·cm, 14 ft·lbf)**

- (b) Connect the water temperature sensor connector.

## 8. REINSTALL THROTTLE BODY (See page FI-39)

## 9. REINSTALL INTAKE AIR CONNECTOR PIPE

## 10. REFILL WITH ENGINE COOLANT (See page CO-2)

## 11. REINSTALL V-BANK COVER