



Position of Parts in Instrument Panel

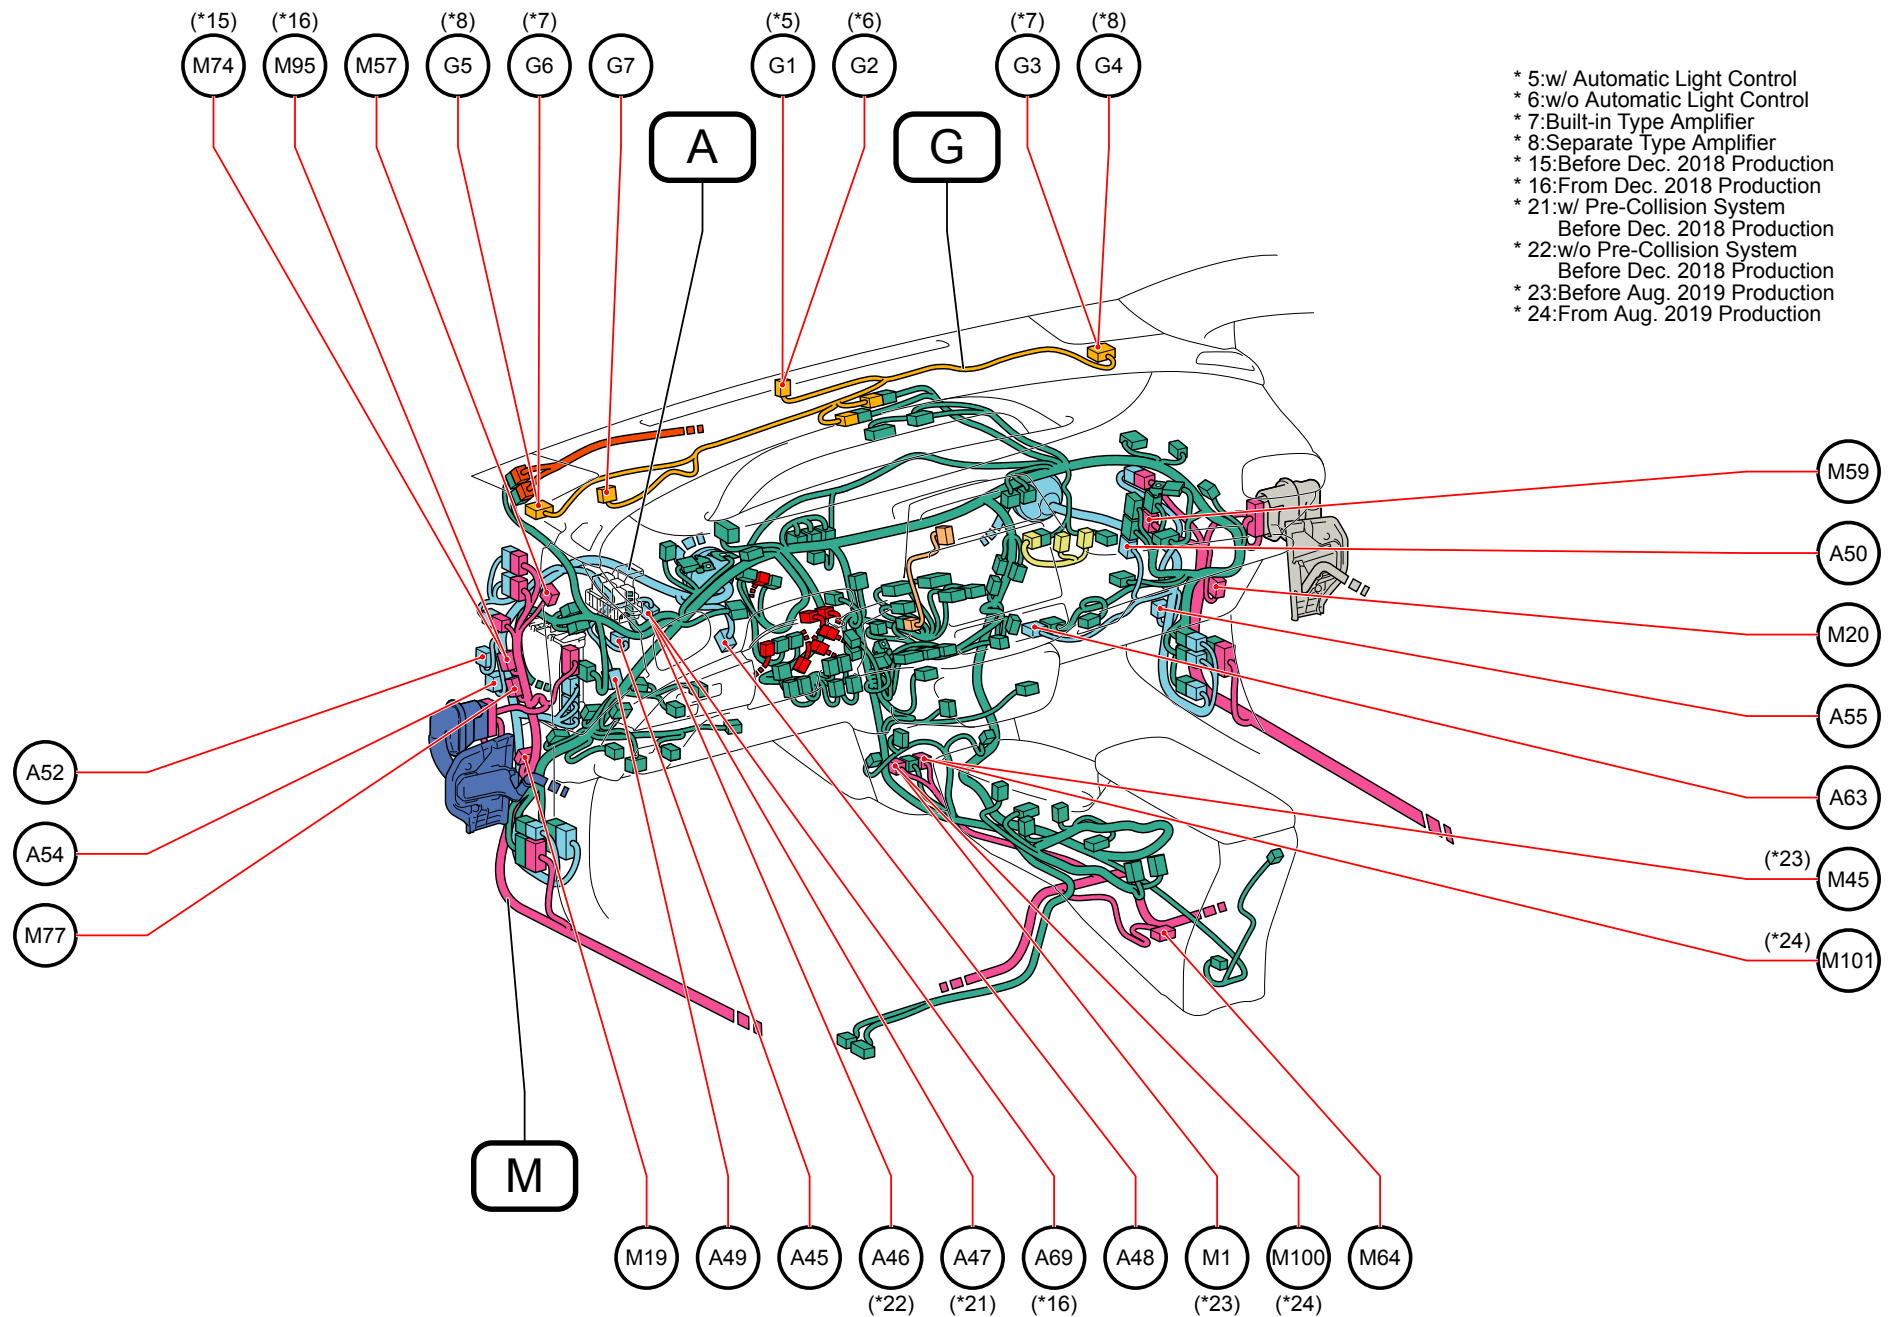


A45	Brake Pedal Stroke Sensor Assembly
A46	Stop Light Switch Assembly
A47	Stop Light Switch Assembly
A48	Accelerator Pedal Sensor Assembly
A49	Parking Brake Switch Assembly
A50	Hybrid Vehicle Control ECU
A52	No. 1 Junction Connector
A54	No. 2 Junction Connector
A55	No. 3 Junction Connector
A63	Blower Motor with Fan Sub-Assembly
A69	Stop Light Switch Assembly
G1	Automatic Light Control Sensor
G2	Cooler (Solar Sensor) Thermistor
G3	Front No. 2 Speaker Assembly RH
G4	Front No. 2 Speaker Assembly RH
G5	Front No. 2 Speaker Assembly LH
G6	Front No. 2 Speaker Assembly LH
G7	Combination Meter Mirror ECU
M1	Airbag ECU Assembly
M19	Diode (Front Courtesy Light LH)
M20	Diode (Front Courtesy Light RH)
M45	Airbag ECU Assembly
M57	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
M59	Certification ECU
M64	Inverter Battery
M74	No. 14 Junction Connector
M77	No. 17 Junction Connector
M95	No. 20 Junction Connector
M100	Airbag ECU Assembly
M101	Airbag ECU Assembly


Position of Parts in Instrument Panel

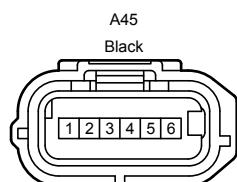


90980-12303

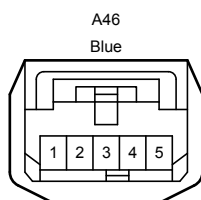

90980-12954

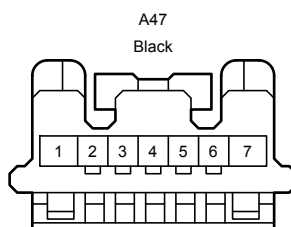


90980-12092

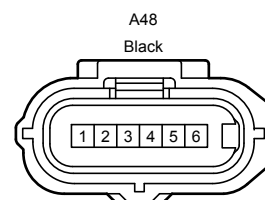


90980-12831




90980-10871

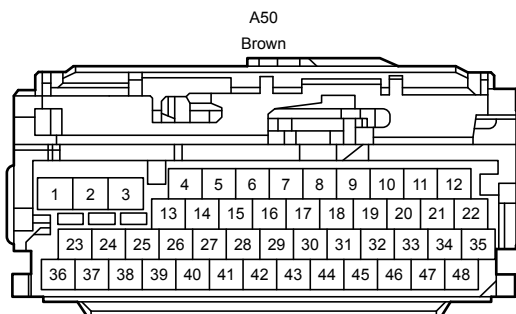


90980-12C24

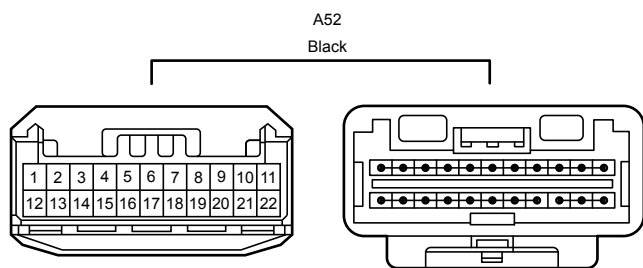


90980-12B54

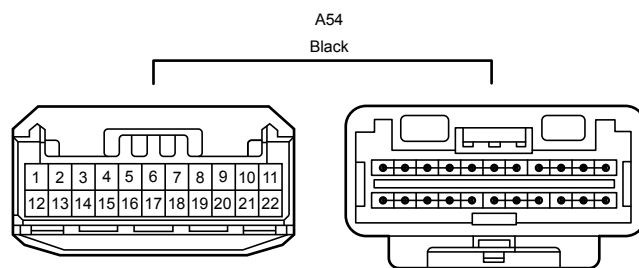


90980-12B54

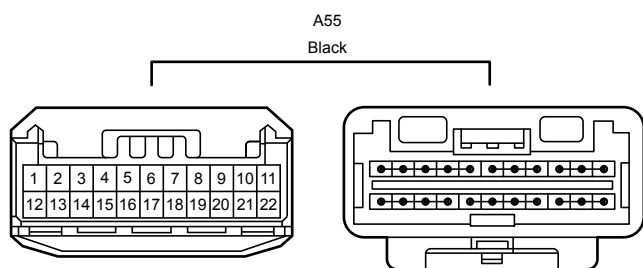


90980-12B54

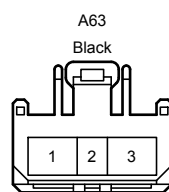


90980-11667

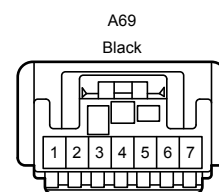


90980-12D92

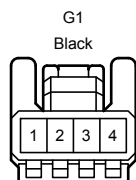


82824-50130




90980-11918

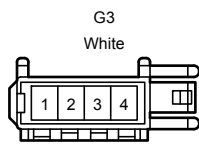

90980-12304

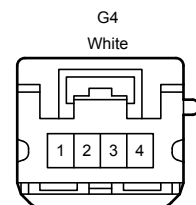

90980-12733

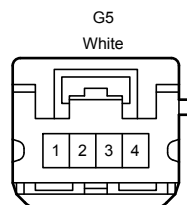

90980-12733

Position of Parts in Instrument Panel

